



STANDARD TALKING SKULL KIT



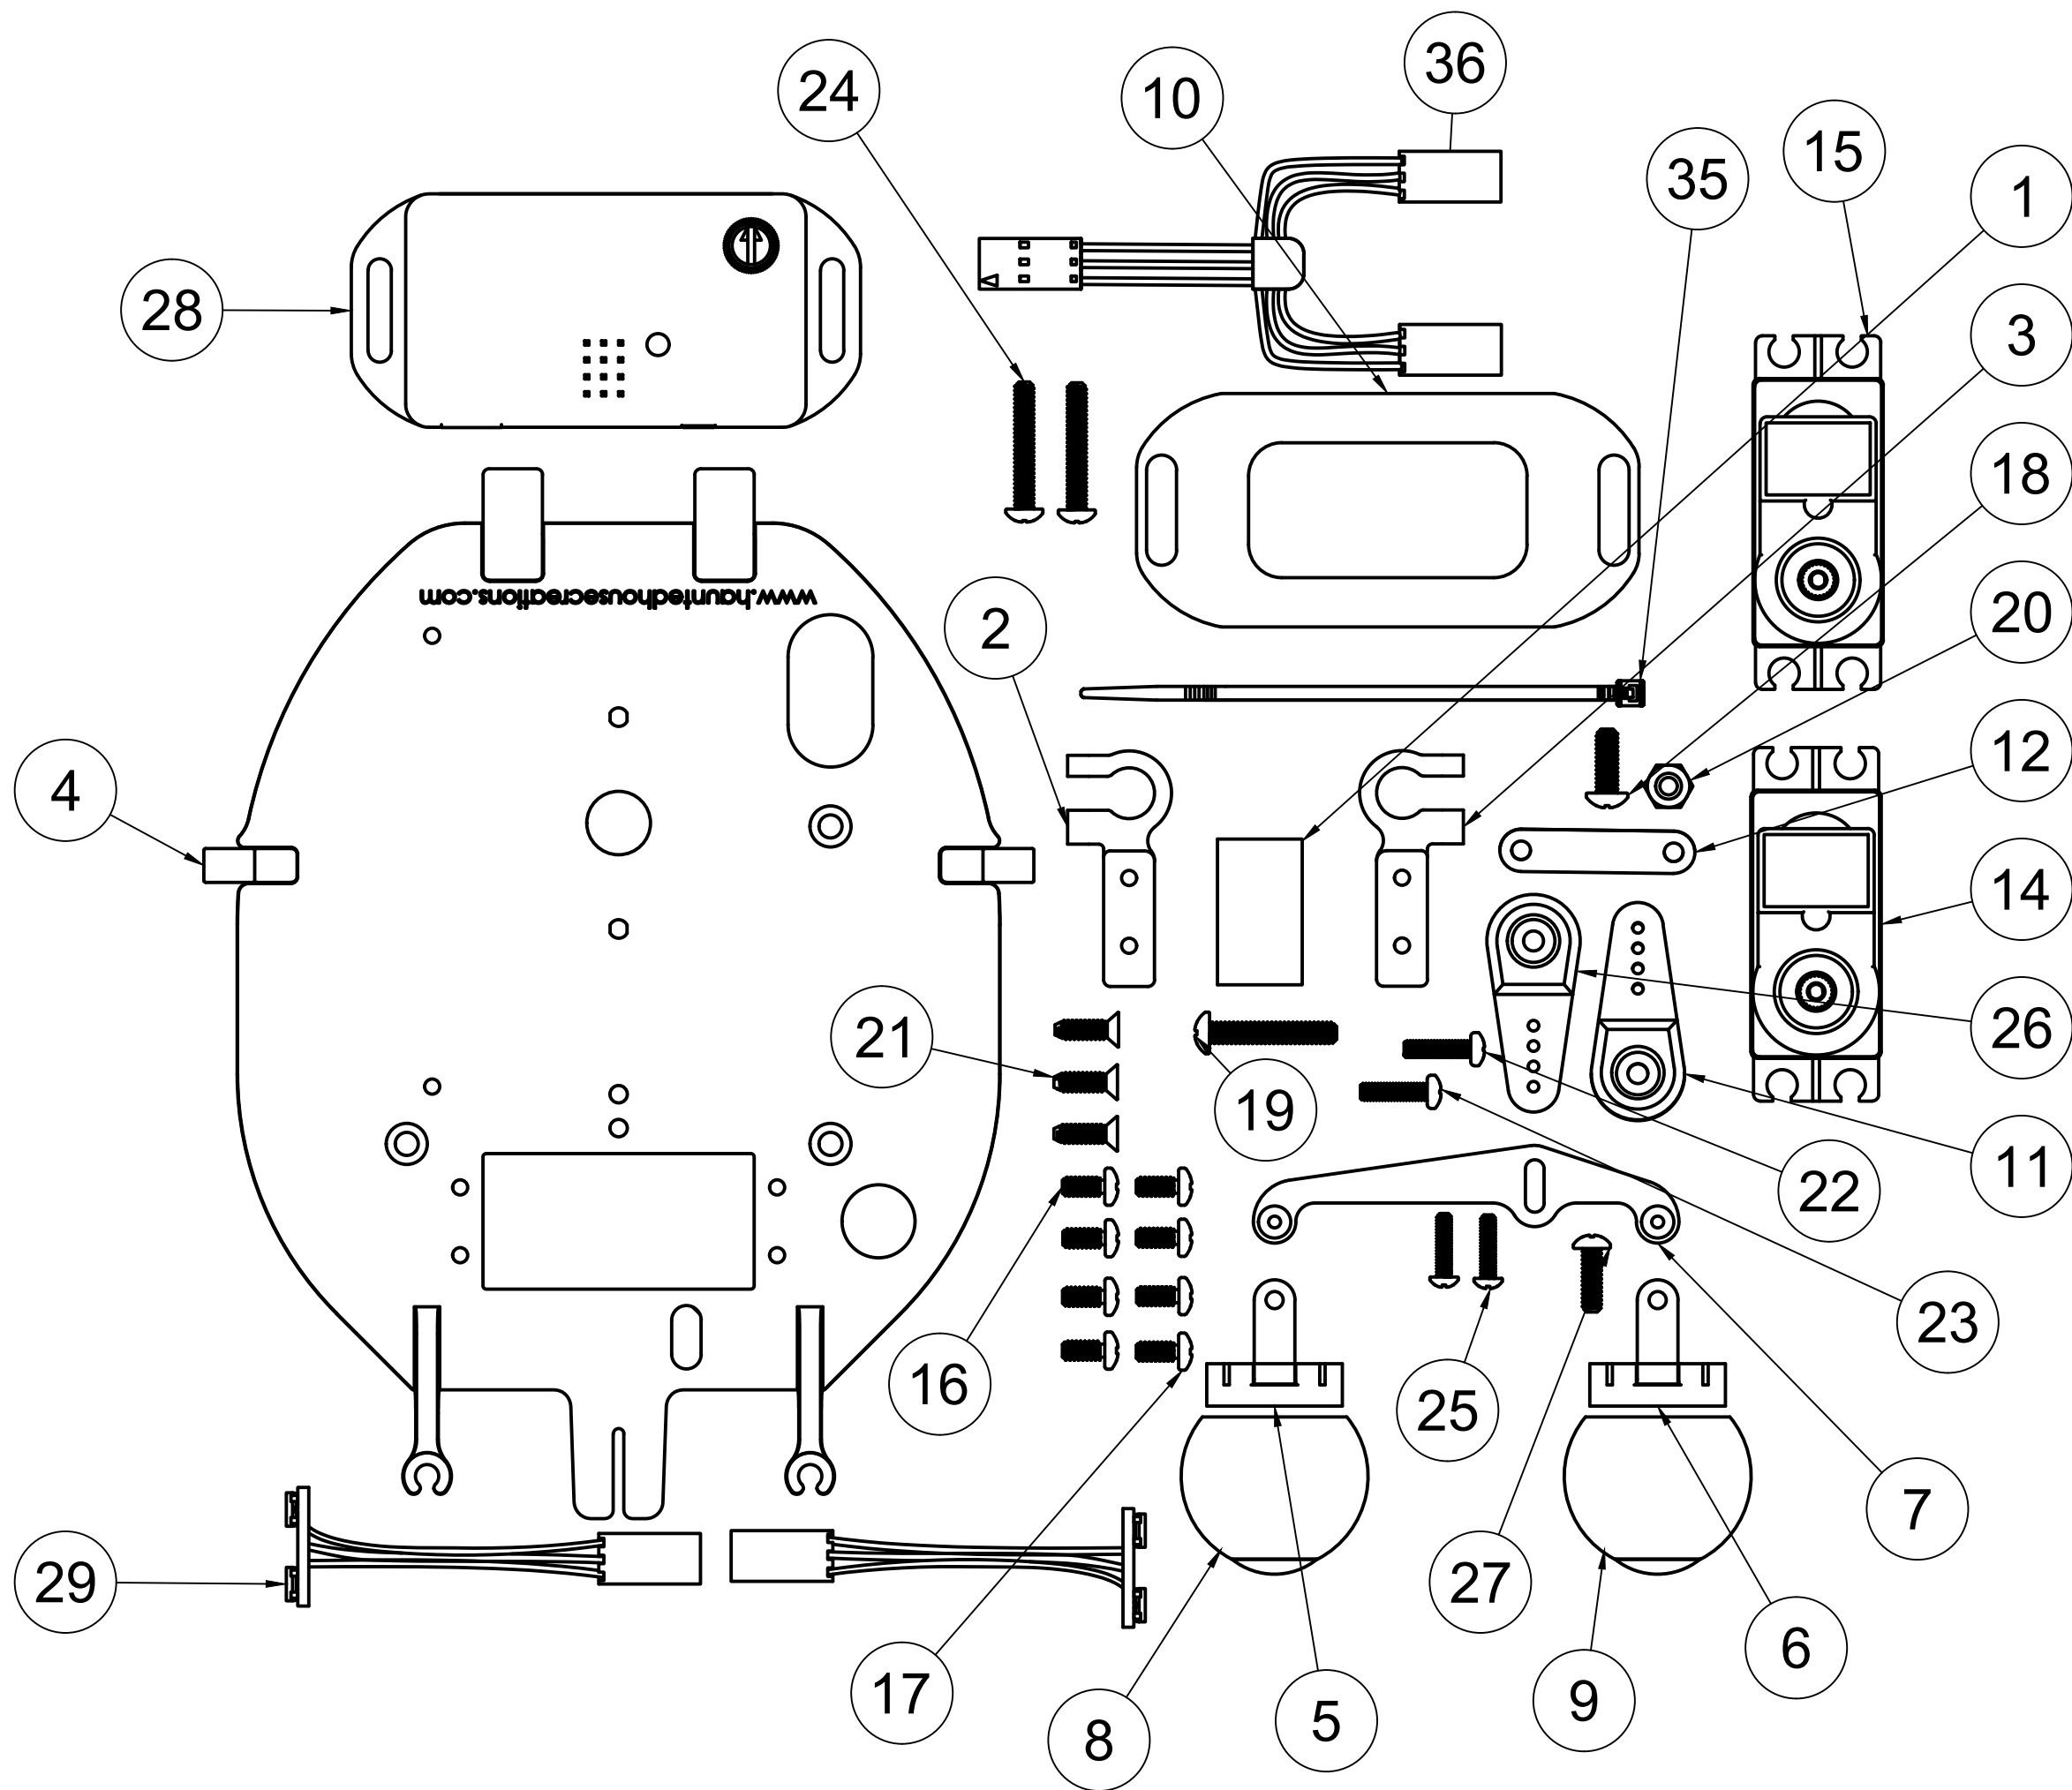

PARTS LIST		
ITEM	QTY	PART NUMBER
1	1	PLATE BLOCK
2	1	PLATE MOUNT AXEL L
3	1	PLATE MOUNT AXEL R
4	1	SKULL PLATE ASSEMBLY
5	1	EYE RING ASS L
6	1	EYE RING ASS R
7	1	EYE PIVOT C
8	1	EYE LEFT
9	1	EYE RIGHT
10	1	RISER PLATE C
11	1	SERVO ARM JAW
12	1	JAW CONNECTING ROD C
13	1	JAW AXEL C
14	1	JAW SERVO
15	1	EYE SERVO
16	4	4-40 EYE 1/4
17	4	4-40 JAW 1/4
18	1	5-40 JAW SERVO CONNECTING ROD 3/8
19	1	5-40 CONNECTING ROD BOT 3/4
20	1	5-40 CONNECTING ROD NUT
21	3	4-40 FLAT 3/8 PLATE
22	1	EYE HORN SCREW
23	1	JAW HORN SCREW
24	2	RISER SCREWS 4-40 3/4
25	2	EYE PIVOT SCREWS 2-56 3/8
26	1	SERVO HORN EYES
27	1	EYE PIVOT SERVO 4-40 3/8
28	1	SERVOTALK
29	2	NEO PIXEL
30	1	JAW
35	1	ZIP TIE
36	1	Y CABLE

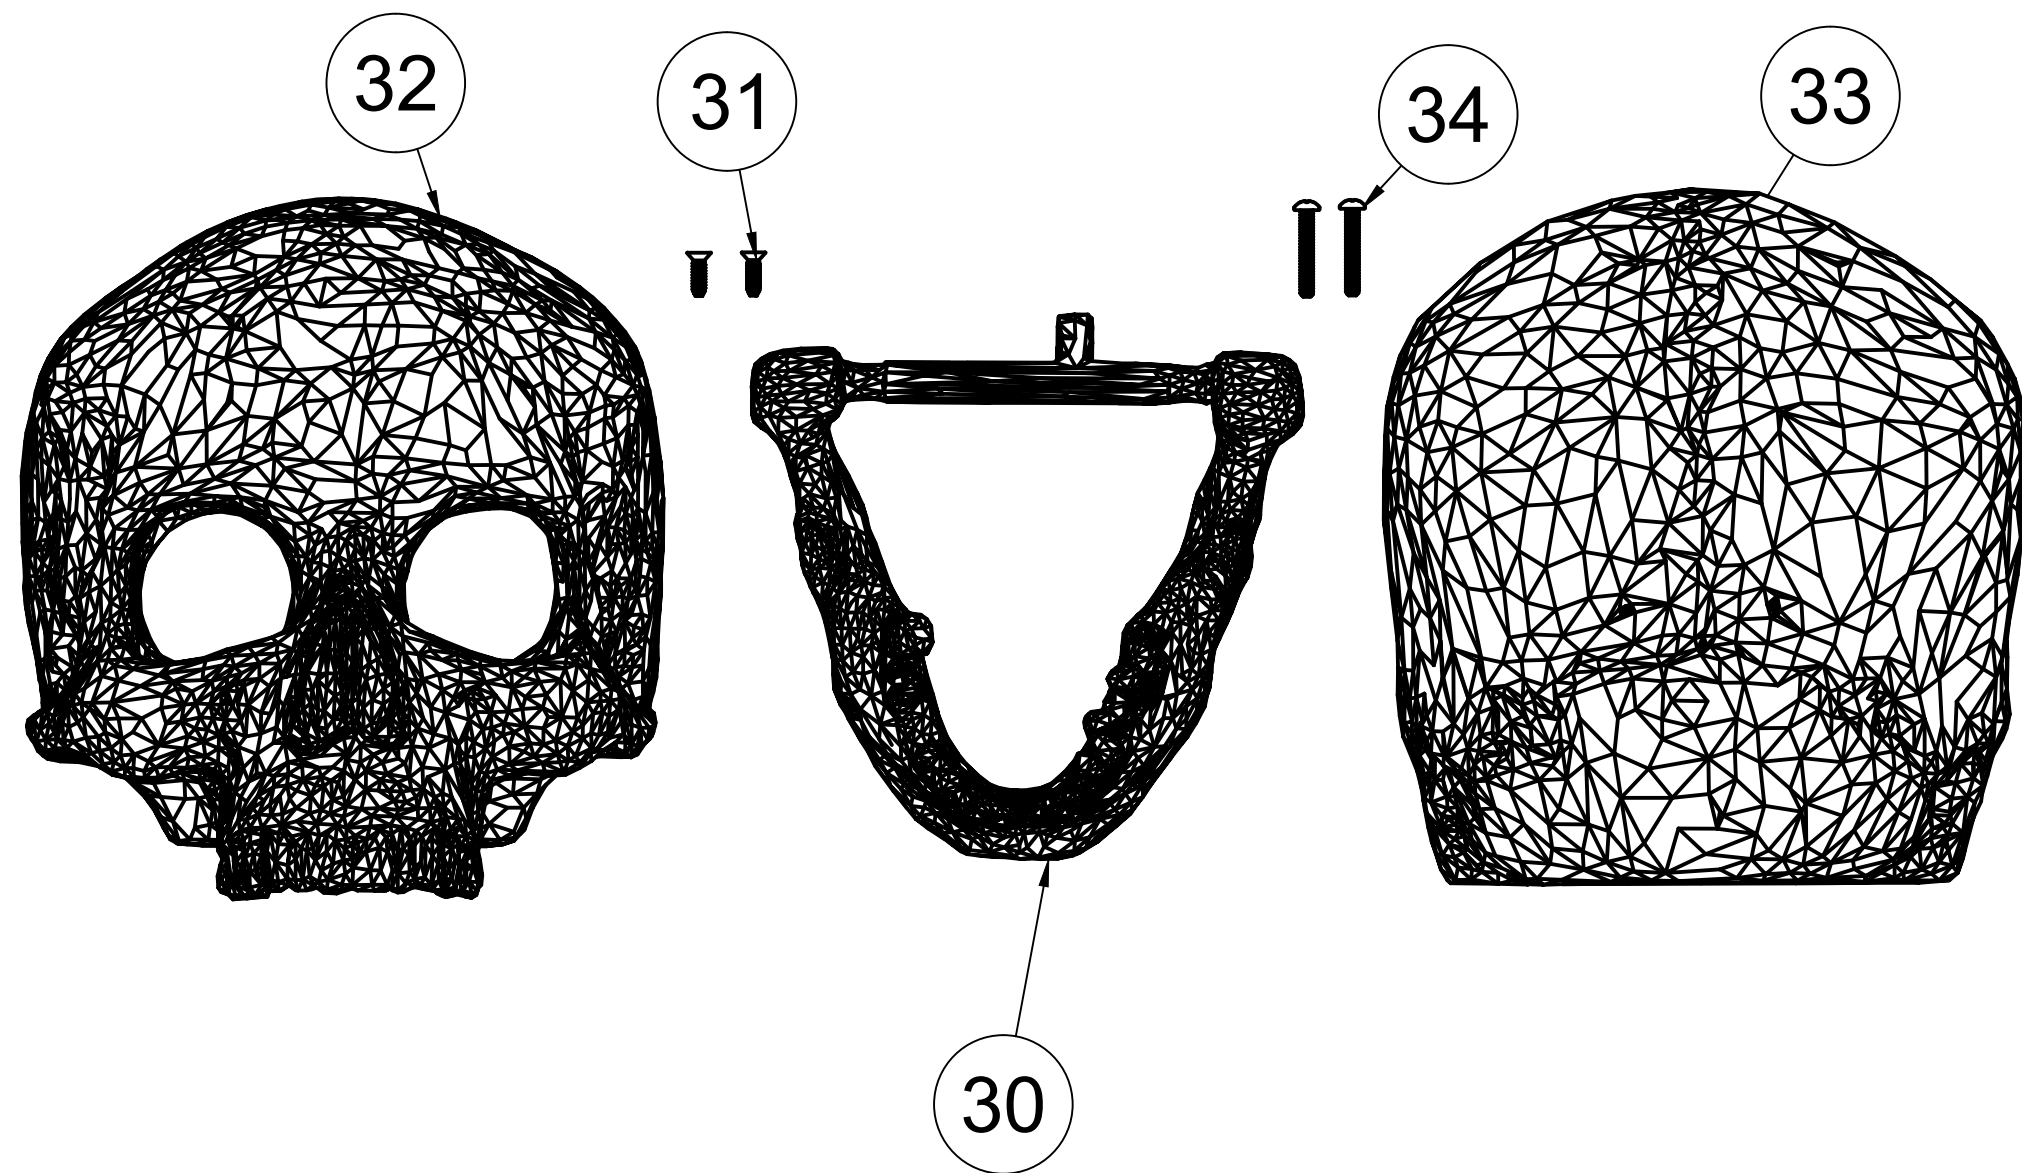

PARTS LIST		
ITEM	QTY	PART NUMBER
30	1	JAW
31	1	4-40 FLAT 3/8 SKULL HOLD DOWN
32	1	SKULL FRONT
33	1	SKULL BACK
34	1	SKULL BACK SCREWS 4-40 3/4

Out Of The Box


*When you receive your new kit
The skull will be assembled.*

1. Unscrew 2 #34 screws from the Back. Pull off the back. Jaw is loose
Do not let it fall.

2. Remove all the parts from
Inside the skull

3. Unscrew 2 #31 screws from the
Skull Plate #4


4 Remove plate from skull
By pulling the back of the plate.

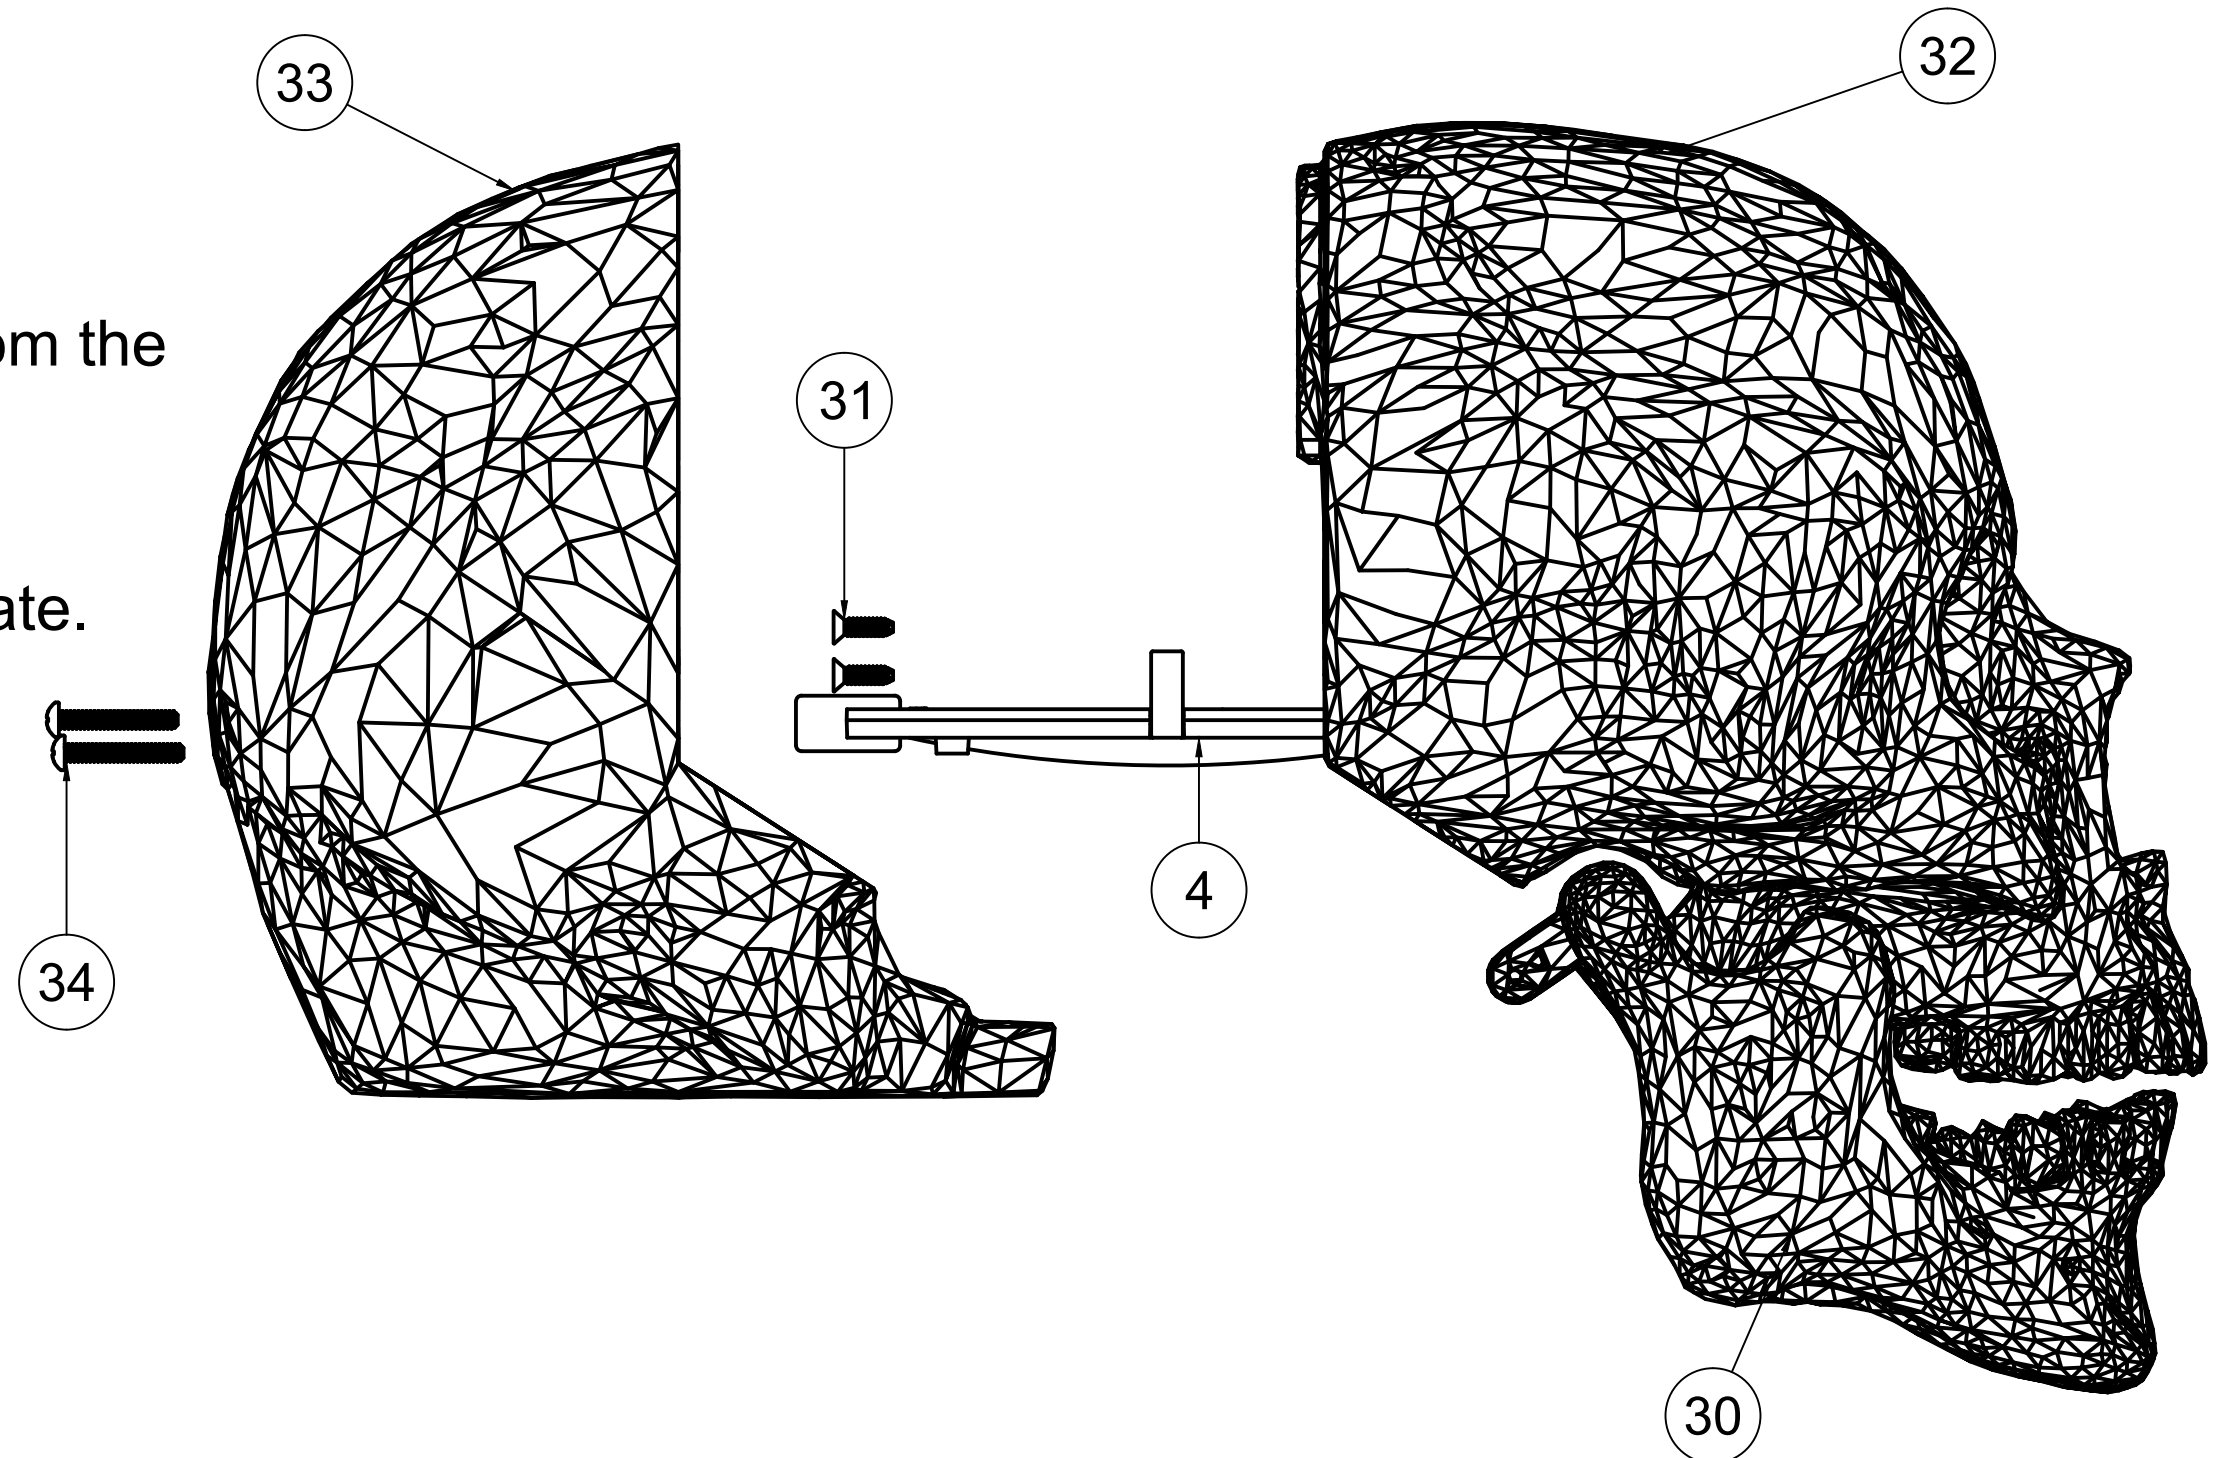

Step 1

Use Pouch Number 1


2. Assemble #3 to #21 through the top of #4 do not tighten all the way
3. Assemble #1 to #21 through the top of #4 do not tighten all the way

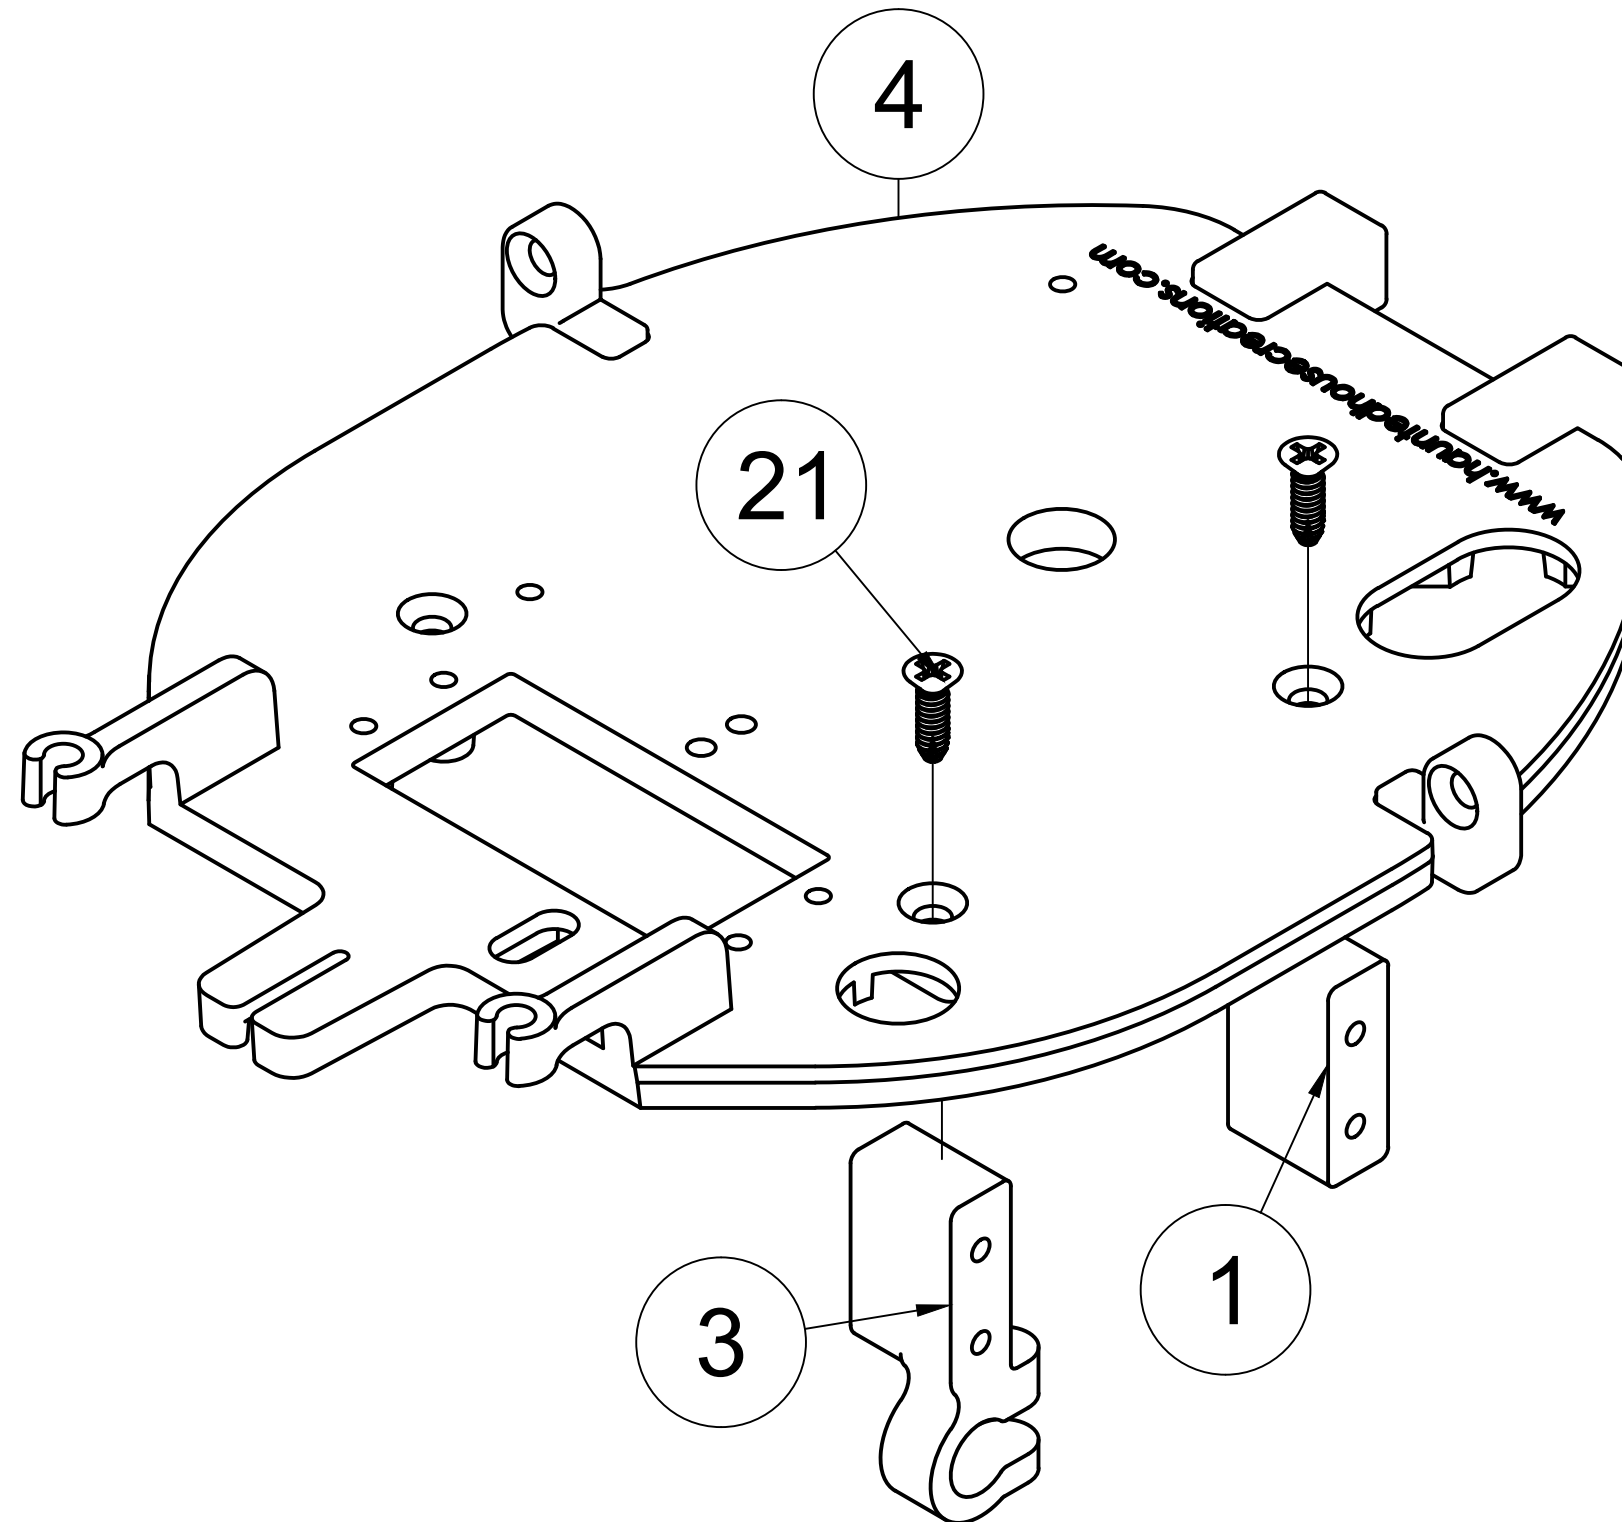

Step 2

Use Pouch Number 2


1. Slide #18 through #12 and screw to A on to #11
leave loose enough that #12 swings freely.

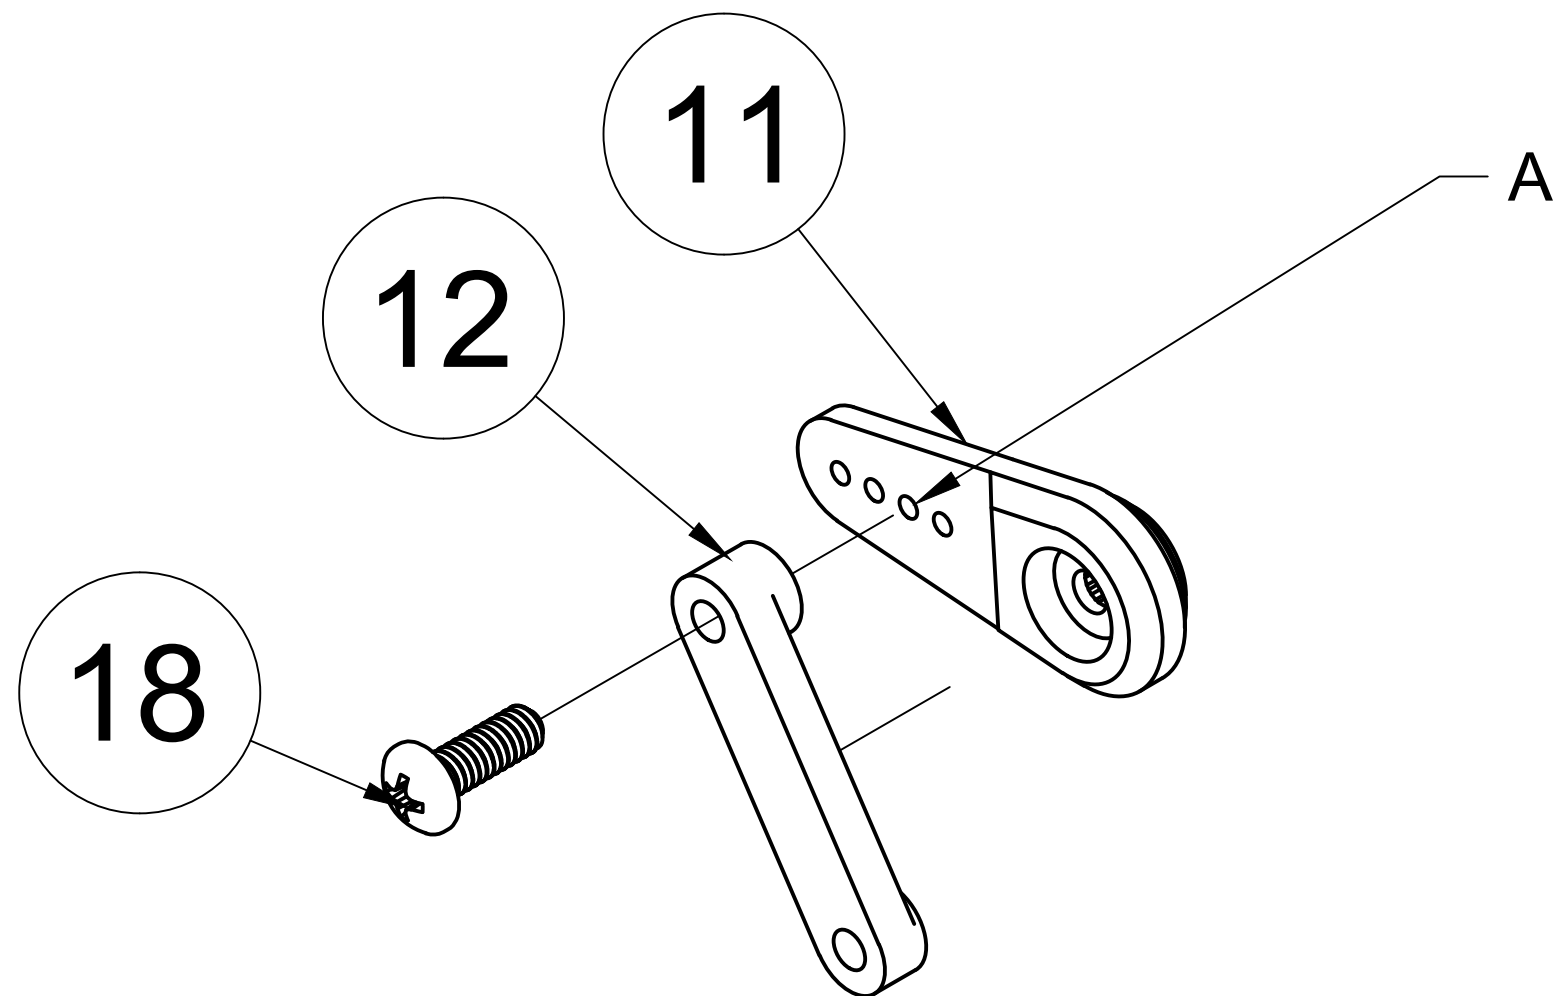

Step 3

Use Pouch Number 2

1. Zero the servo First.
2. Push Assembly A from Step 2 on to the servo perpendiculary tighten with #23(This Screw is Removed From The Servo).
3. Slide the servo #14 between #3 and #4 until the servo seats.
4. Hold your fingers on the outside of #3 and #4 fermly to hold the servo #14 in place and tighten screws #21.
5. Take 4 #17 screws and Tighten the servo down.

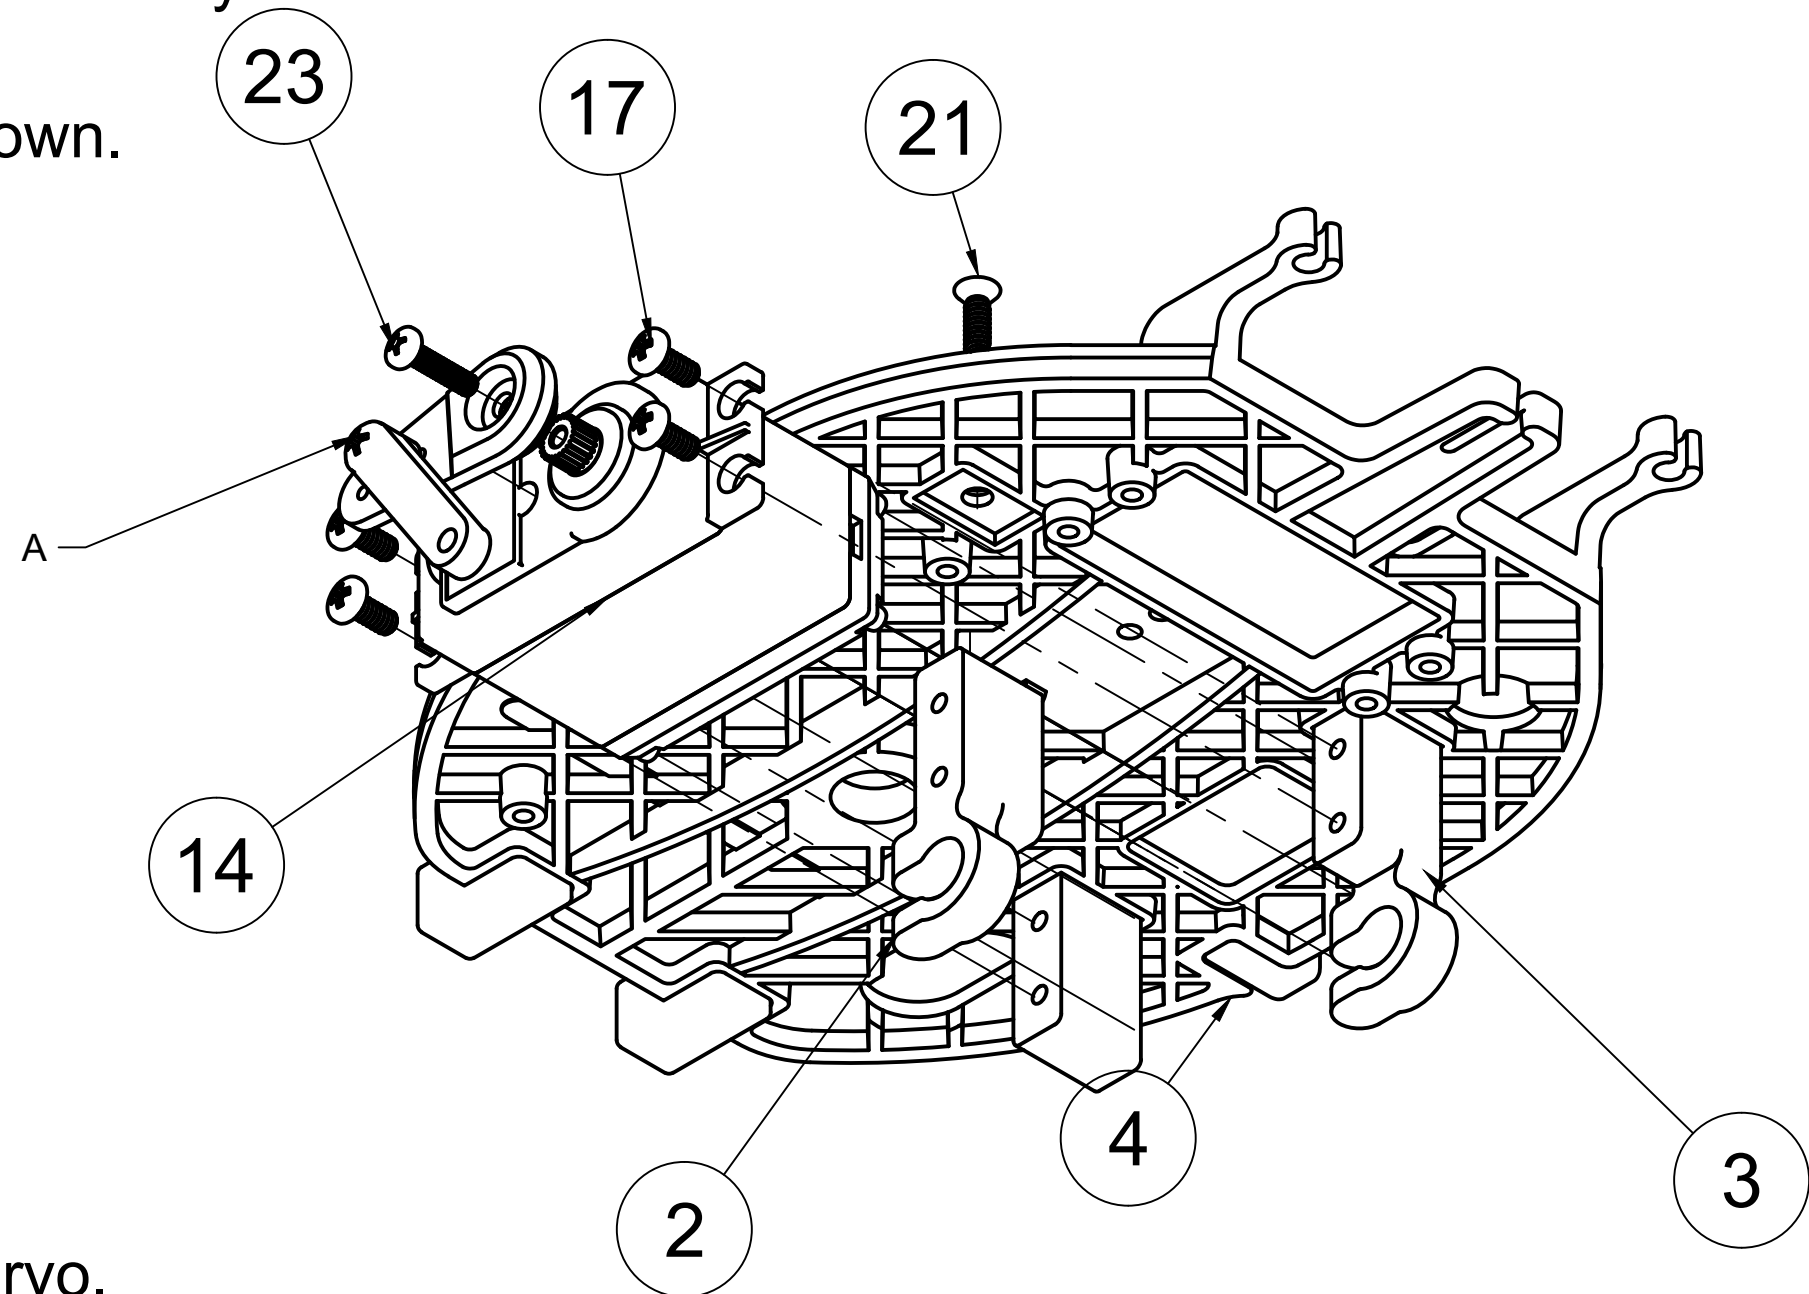


* Note: Some kits do not include the servo.

Step 4

Use Pouch Number 3


1. Assemble #5 to #7 with #25 make sure the washer side is facing up on #7 Tighten Screw until #5 stops swivelling and backoff until it starts to swivel freely. Note do not over tighten or you will strip the hole.
2. Repeat this with #6 to #7 and #25
3. Slide #27 through the slot on #7 from the bottom and thread it to #26 hole A ,untill 2 threads pass through the top of #26 .
Make sure the spline on #26 is facing down.

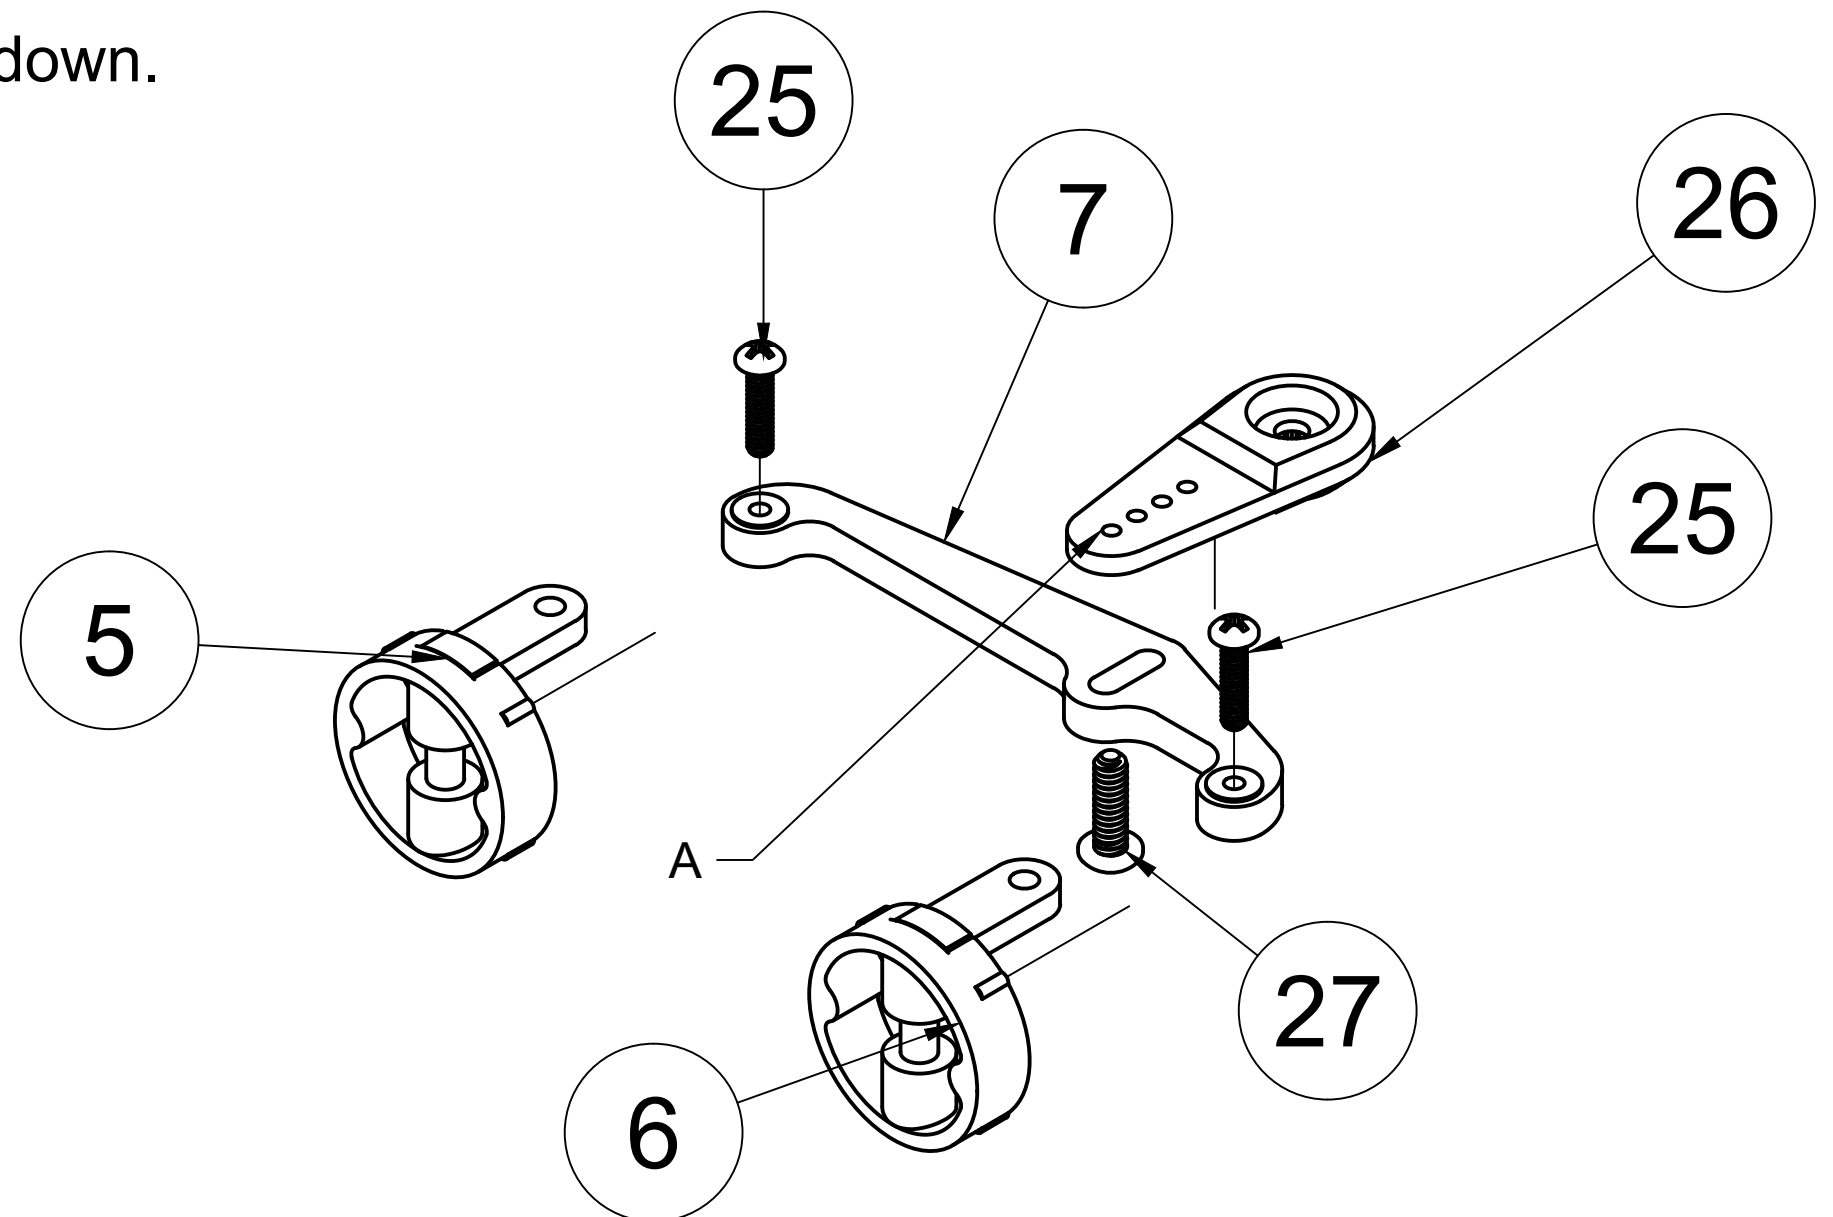

Step 5

Use Pouch Number 3


1. Slide #15 servo wire through the hole in #4, tilt the the servo downward to the wire side and pop it through the hole seat it in place.
2. Slide 4 #16 screws through the servo and screw to holes in #4

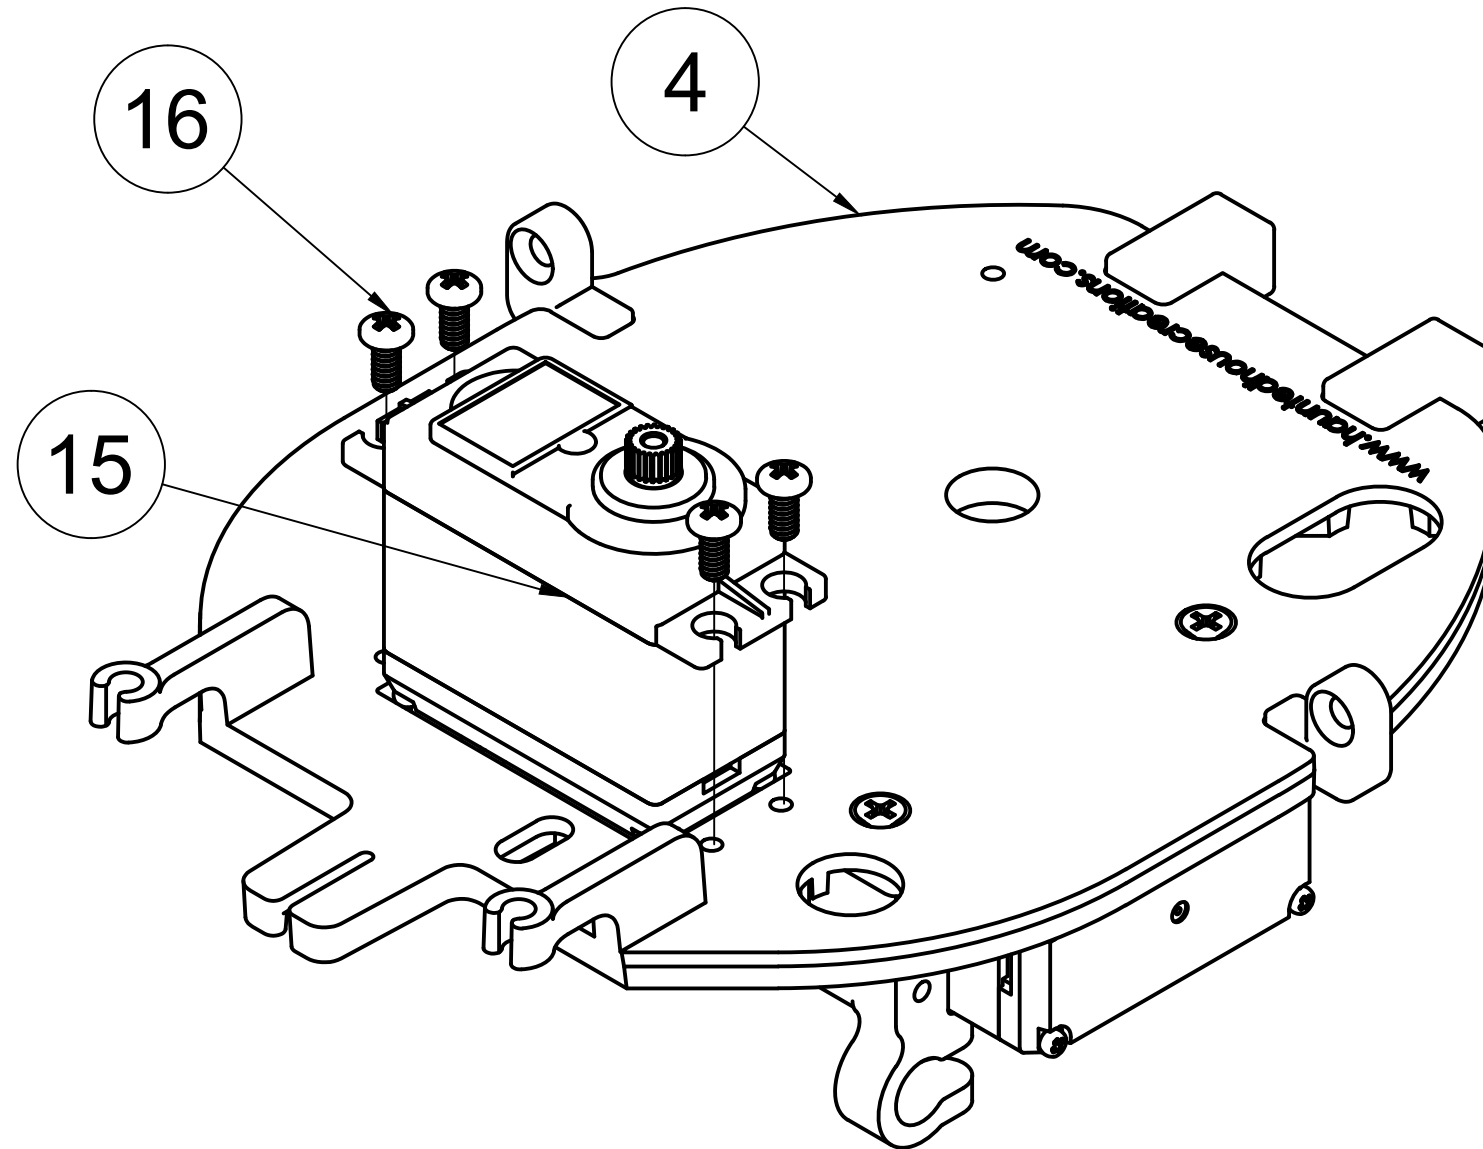

* Note: Some kits do not include the servo.

Step 6


1. Clip #5 and #6 into A and B on #4
2. Push #26 onto the servo Spline until it is seated
3. Install #22 (is Removed From The Servo) screw into #15 and tighten.

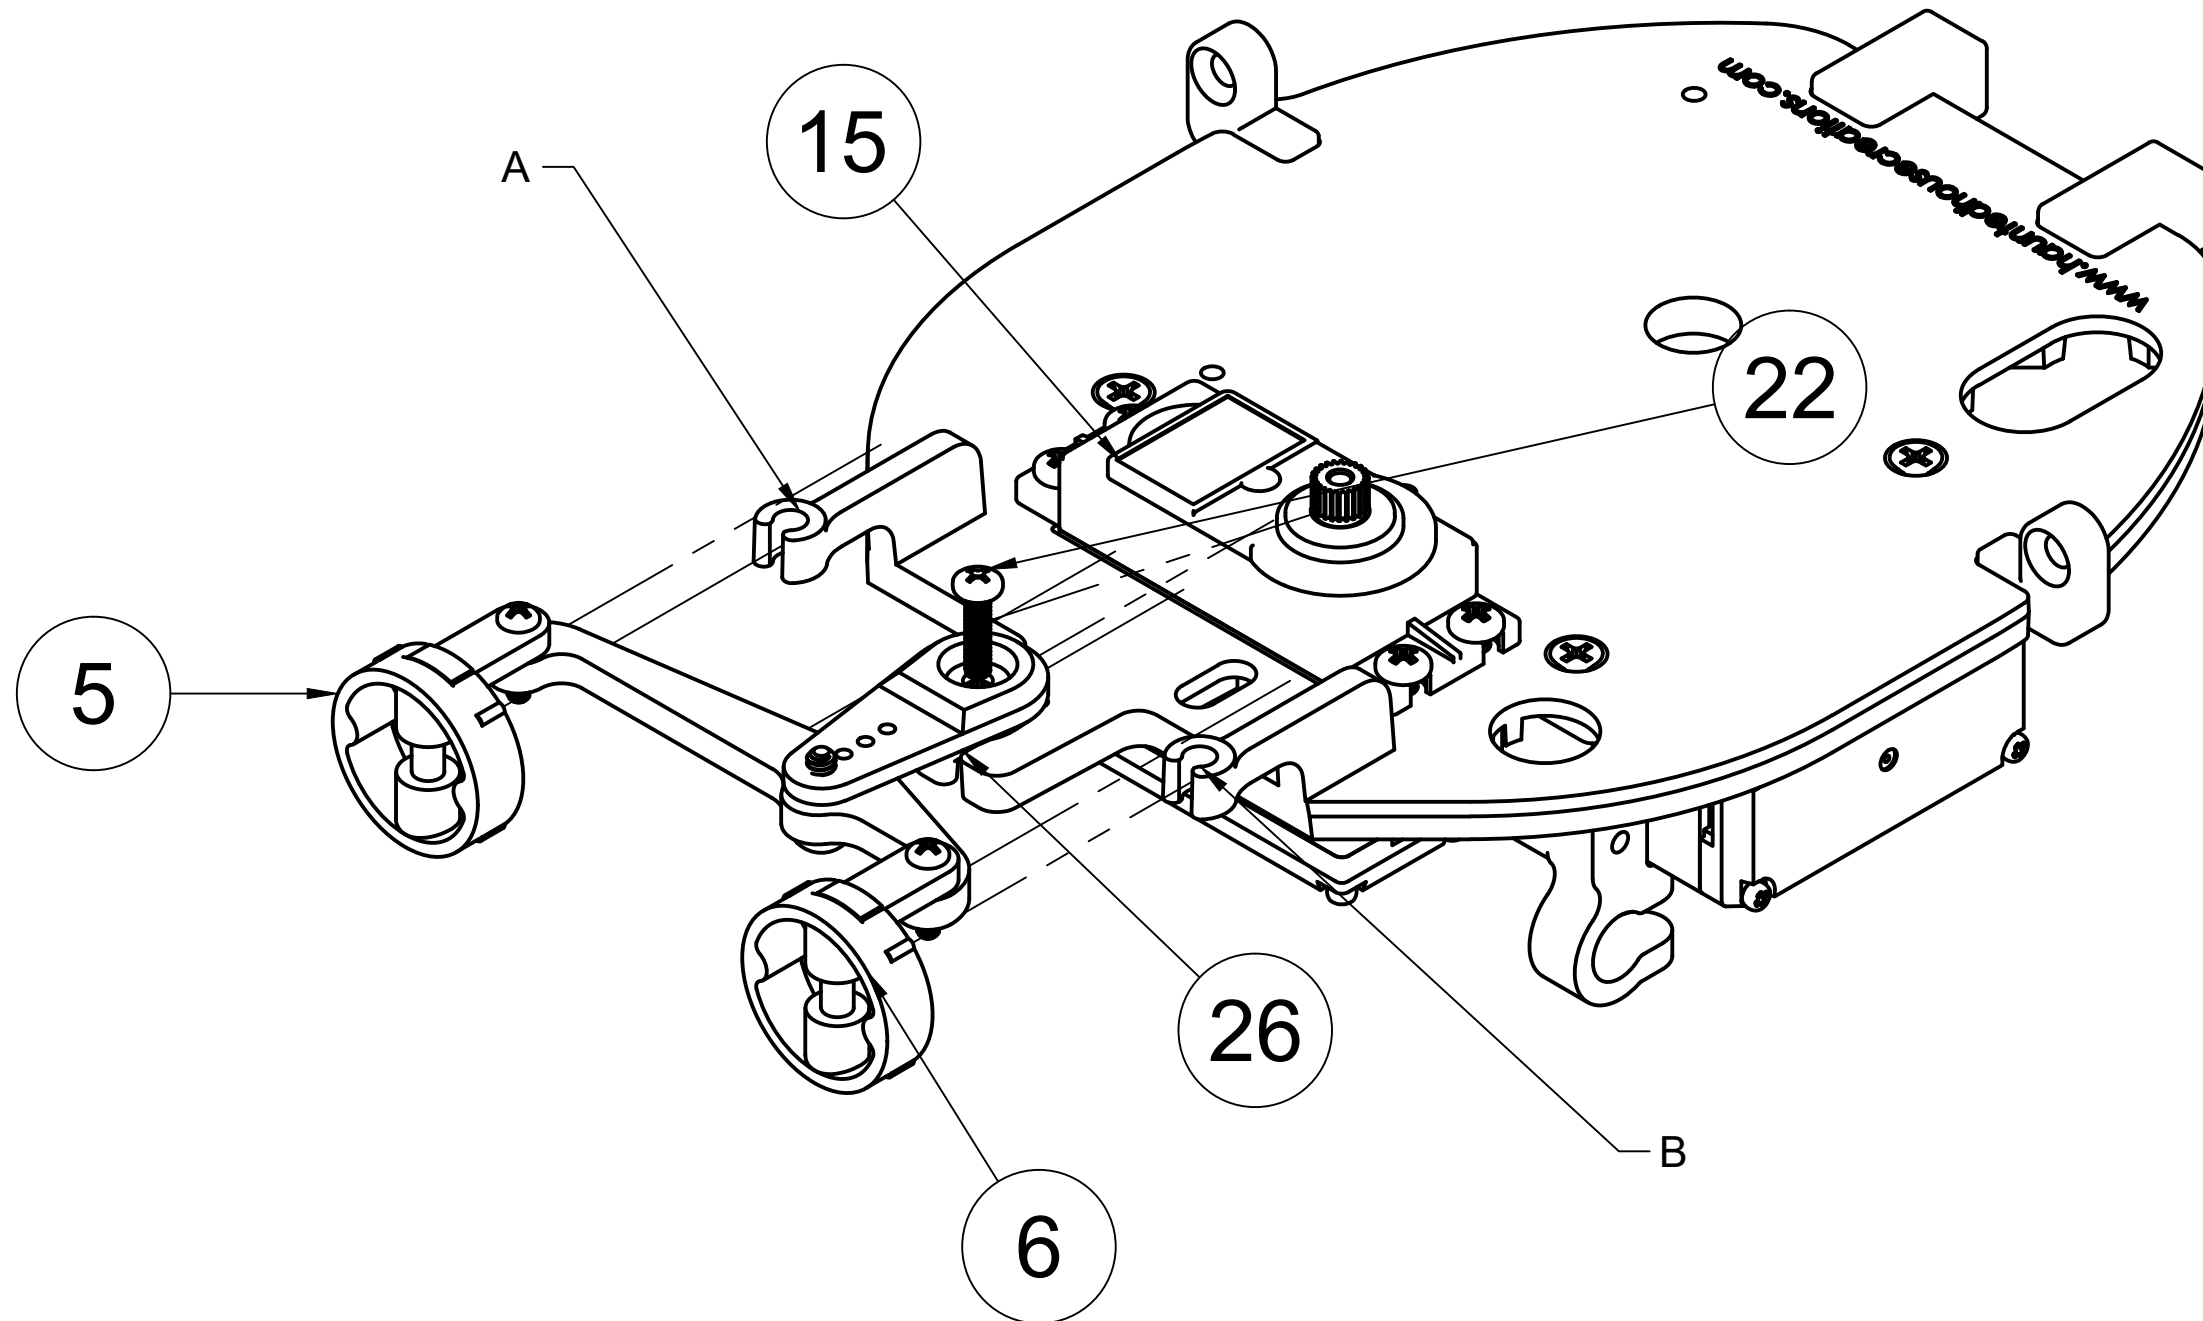

Step 7

Use Pouch Number 4

1. Slid #29 through #5 Eye Ring on the left side
2. Slide #8 Eye over #5 until its all the way in.
3. Repeat the same for #29 #6 and #9 right side

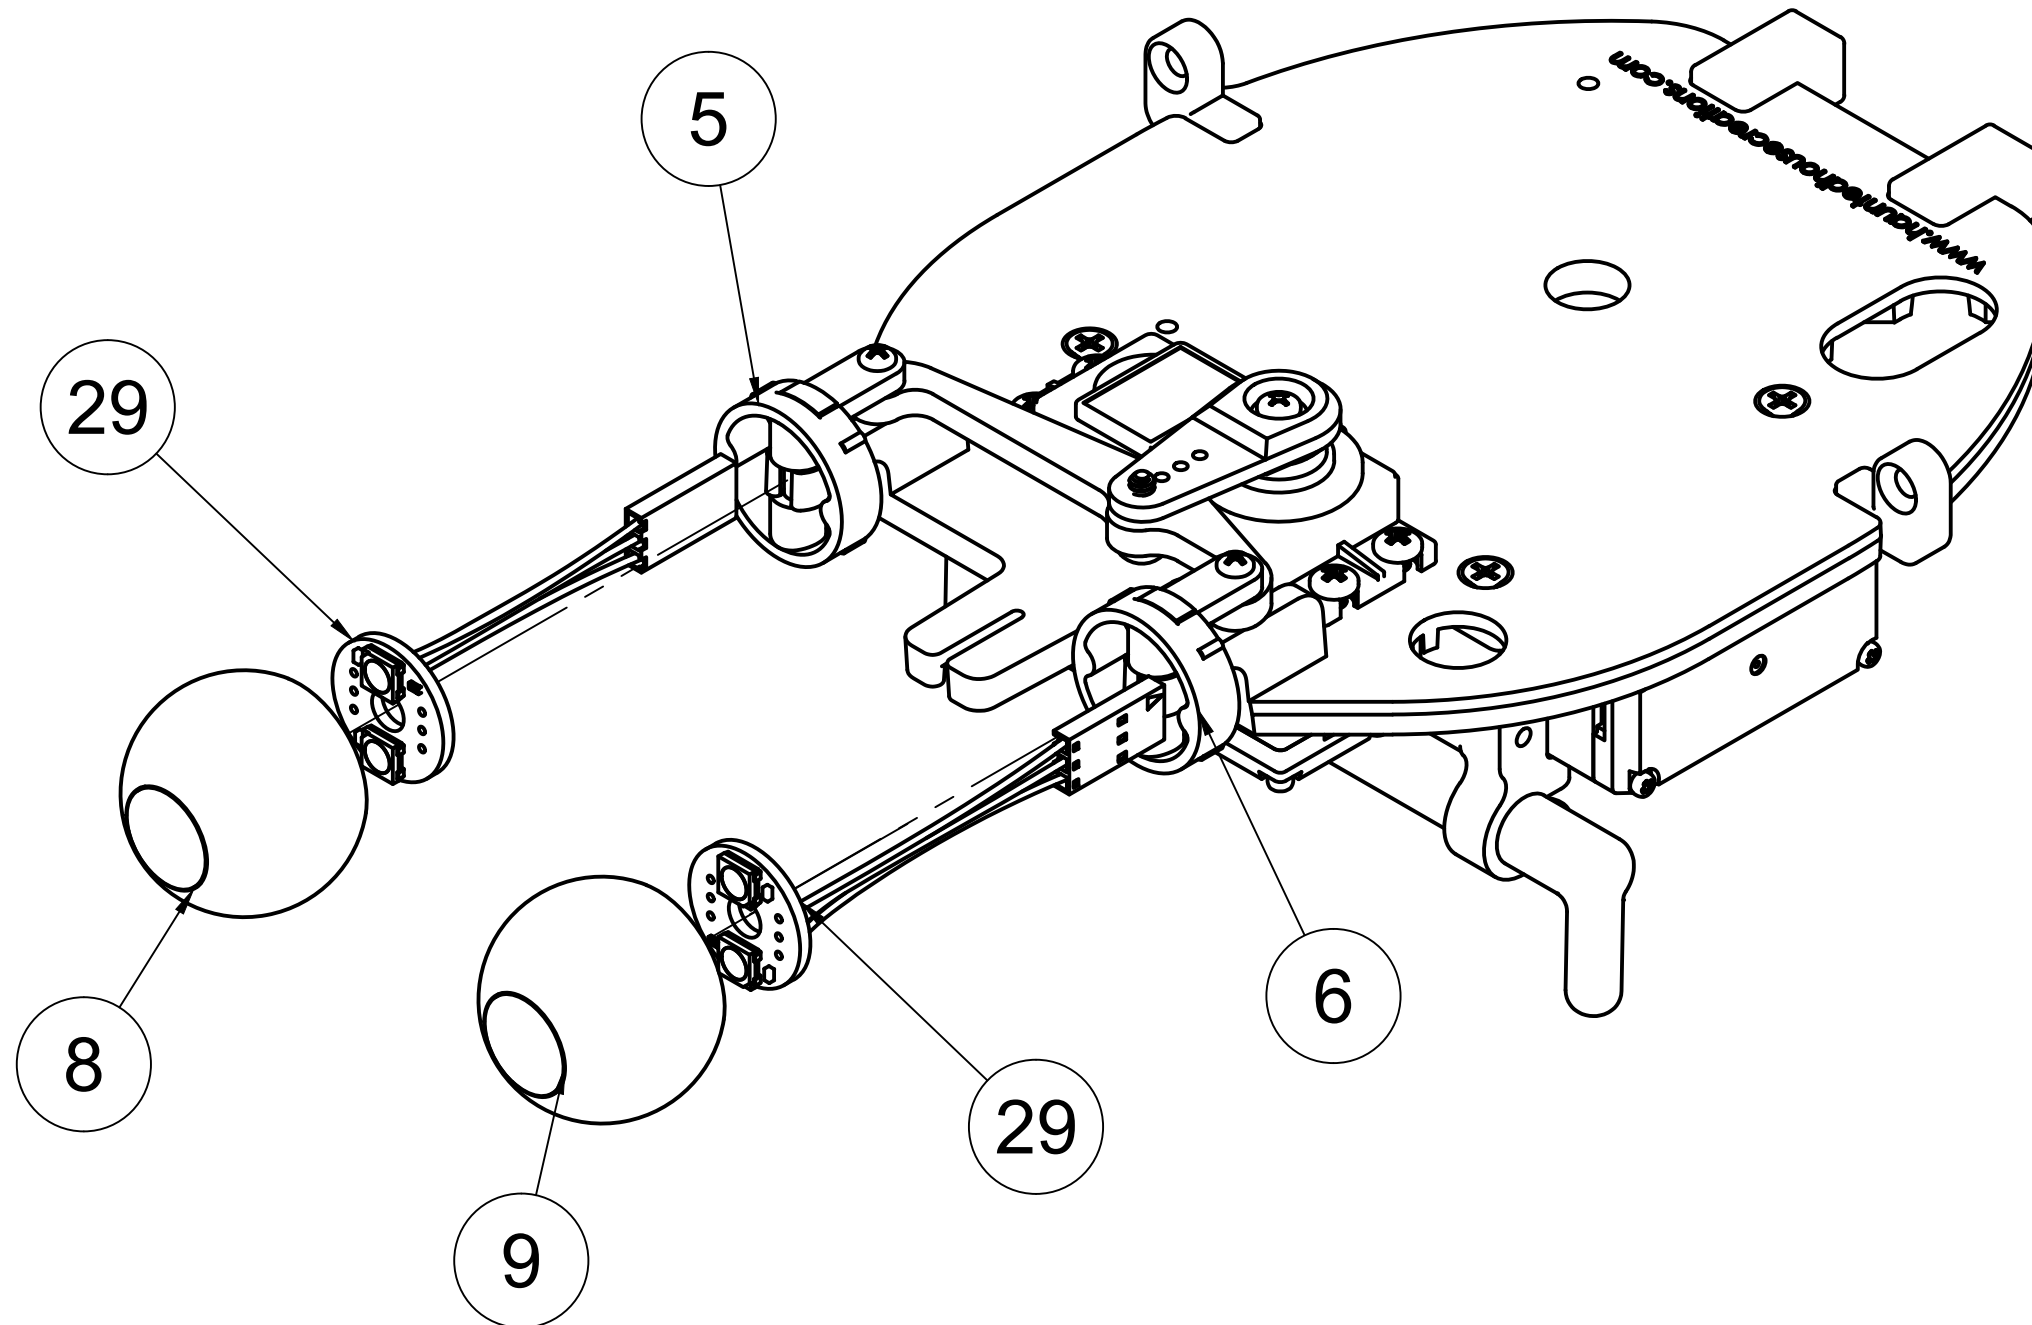


*Note: Some Kits Do Not Include Neo Pixels.


Step 8

Use Pouch Number 2

1. Snap #13 to #2 A and #3 B
 2. Slide #19 through #12 then through #13 and tighten #20
- Allow so sslack so the nut and bolt can spin.

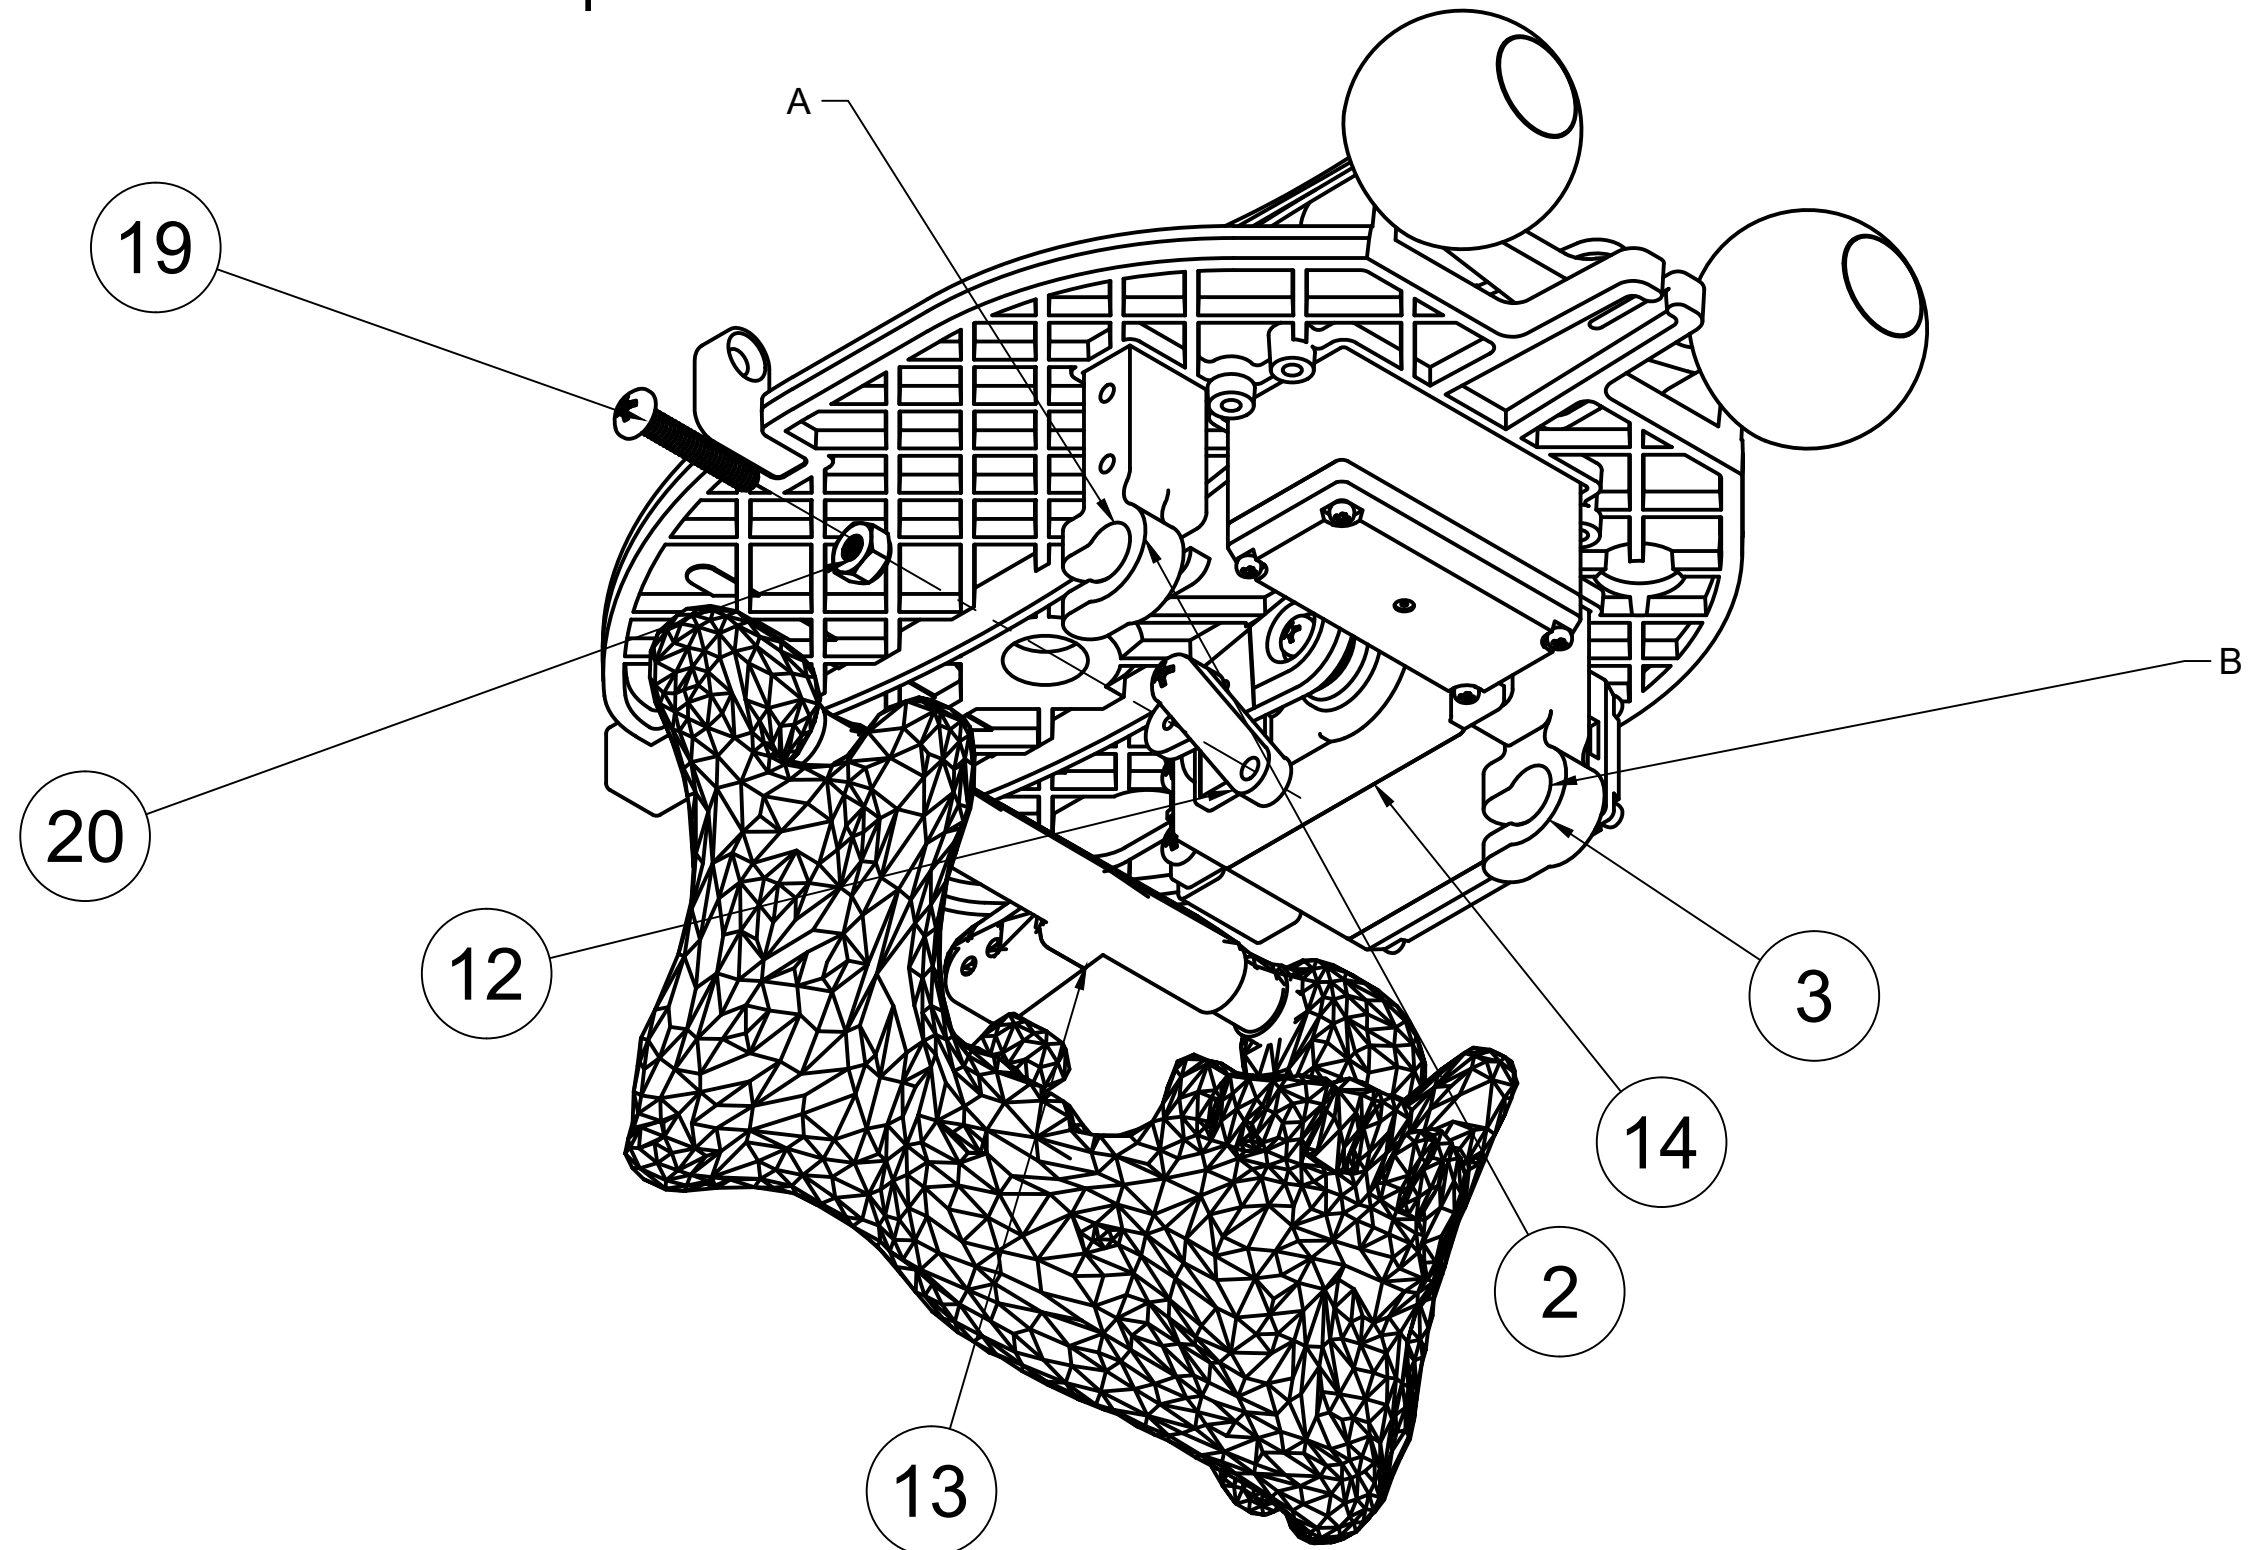

If you do not have the Head turn kit skip to Step 9

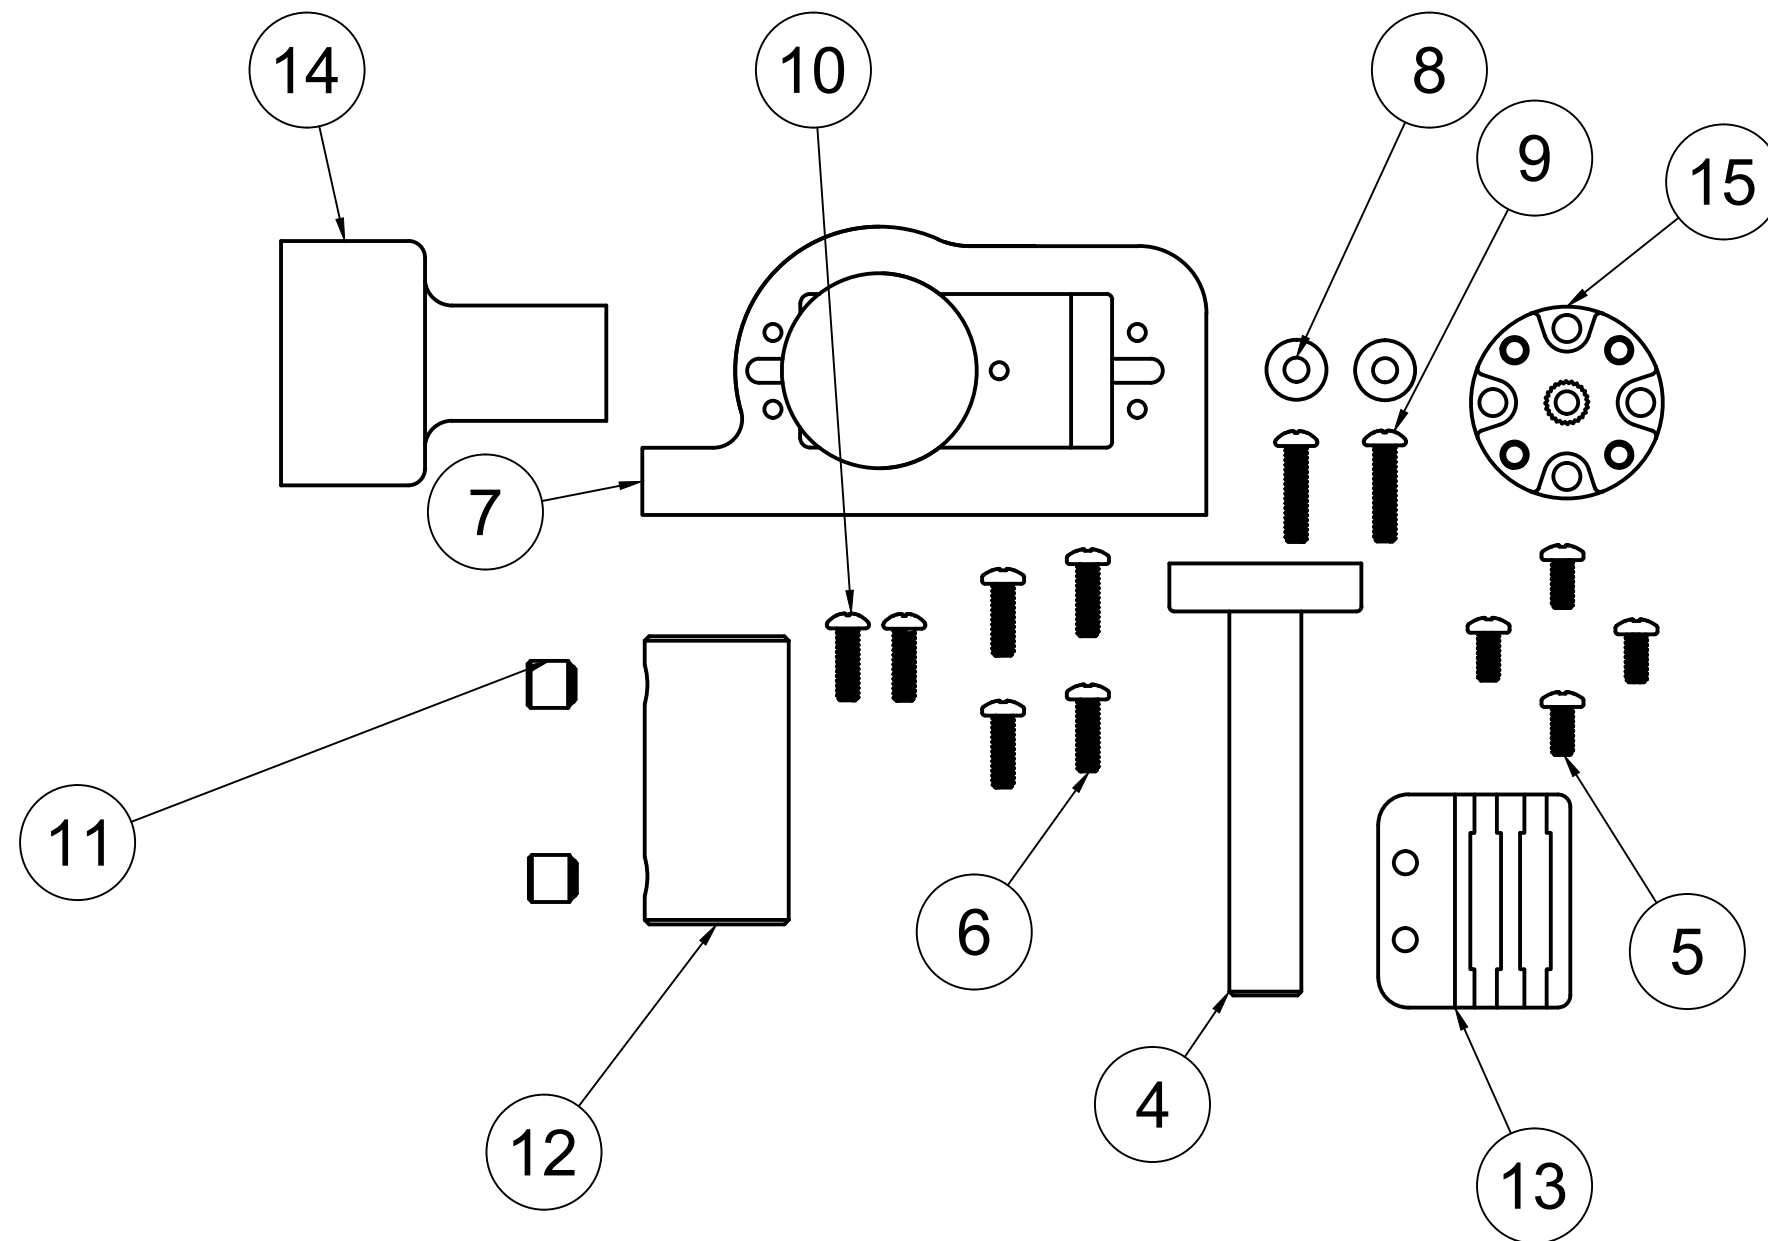


PARTS LIST		
ITEM	QTY	PART NAME
4	1	SERVO SHAFT HEAD TURN
5	4	HUB 4-40 PAN 1/4
6	4	SERVO 4-40 PAN3/8
7	1	HEAD TURN MOUNT 2024
8	2	4-40 WASHER TURN HOLD DOWN
9	2	4-40 1/2 TURN HOLD DOWN
10	2	4-40 3/8 SERVOTALK
11	2	COUPLING SET SCREW 1/4-20 X 1/4
12	1	COUPLING
13	1	NEOPIXEL CONNECTOR SUPPORT
14	1	SHAFT HUB ALIGNMENT TOOL
15	1	24 SPLINE HUB

Head Turn Step 1

1. Attach Servo With #2 by sliding #2 on to the Spline of the servo tighten down with servo screw



Servo May not be supplied
With the kit.
(Sold Separately)

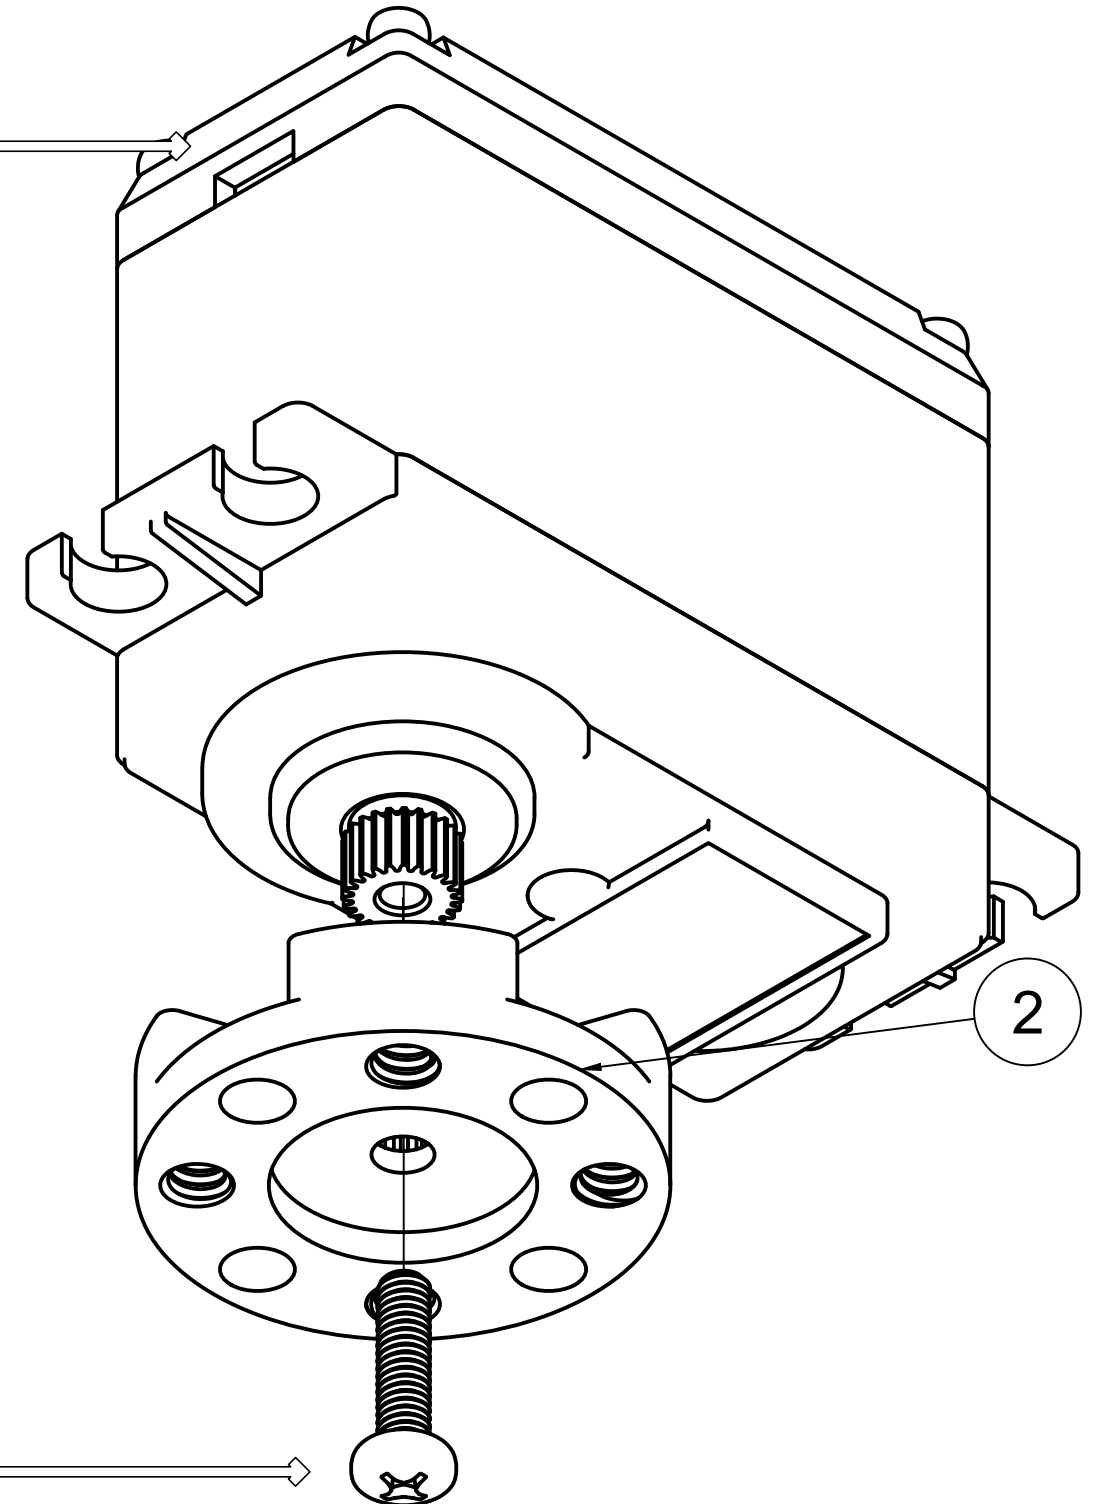

Head Turn Step 2


2. Slide 4 #5 screws Through #2 and fasten to #4.
Do not tighten.
You can turn #2 to access #5. Slide the alignment
Tool along #4 all the way, now you can tighten
All 4 #5 screws.

Alignment Tool #13

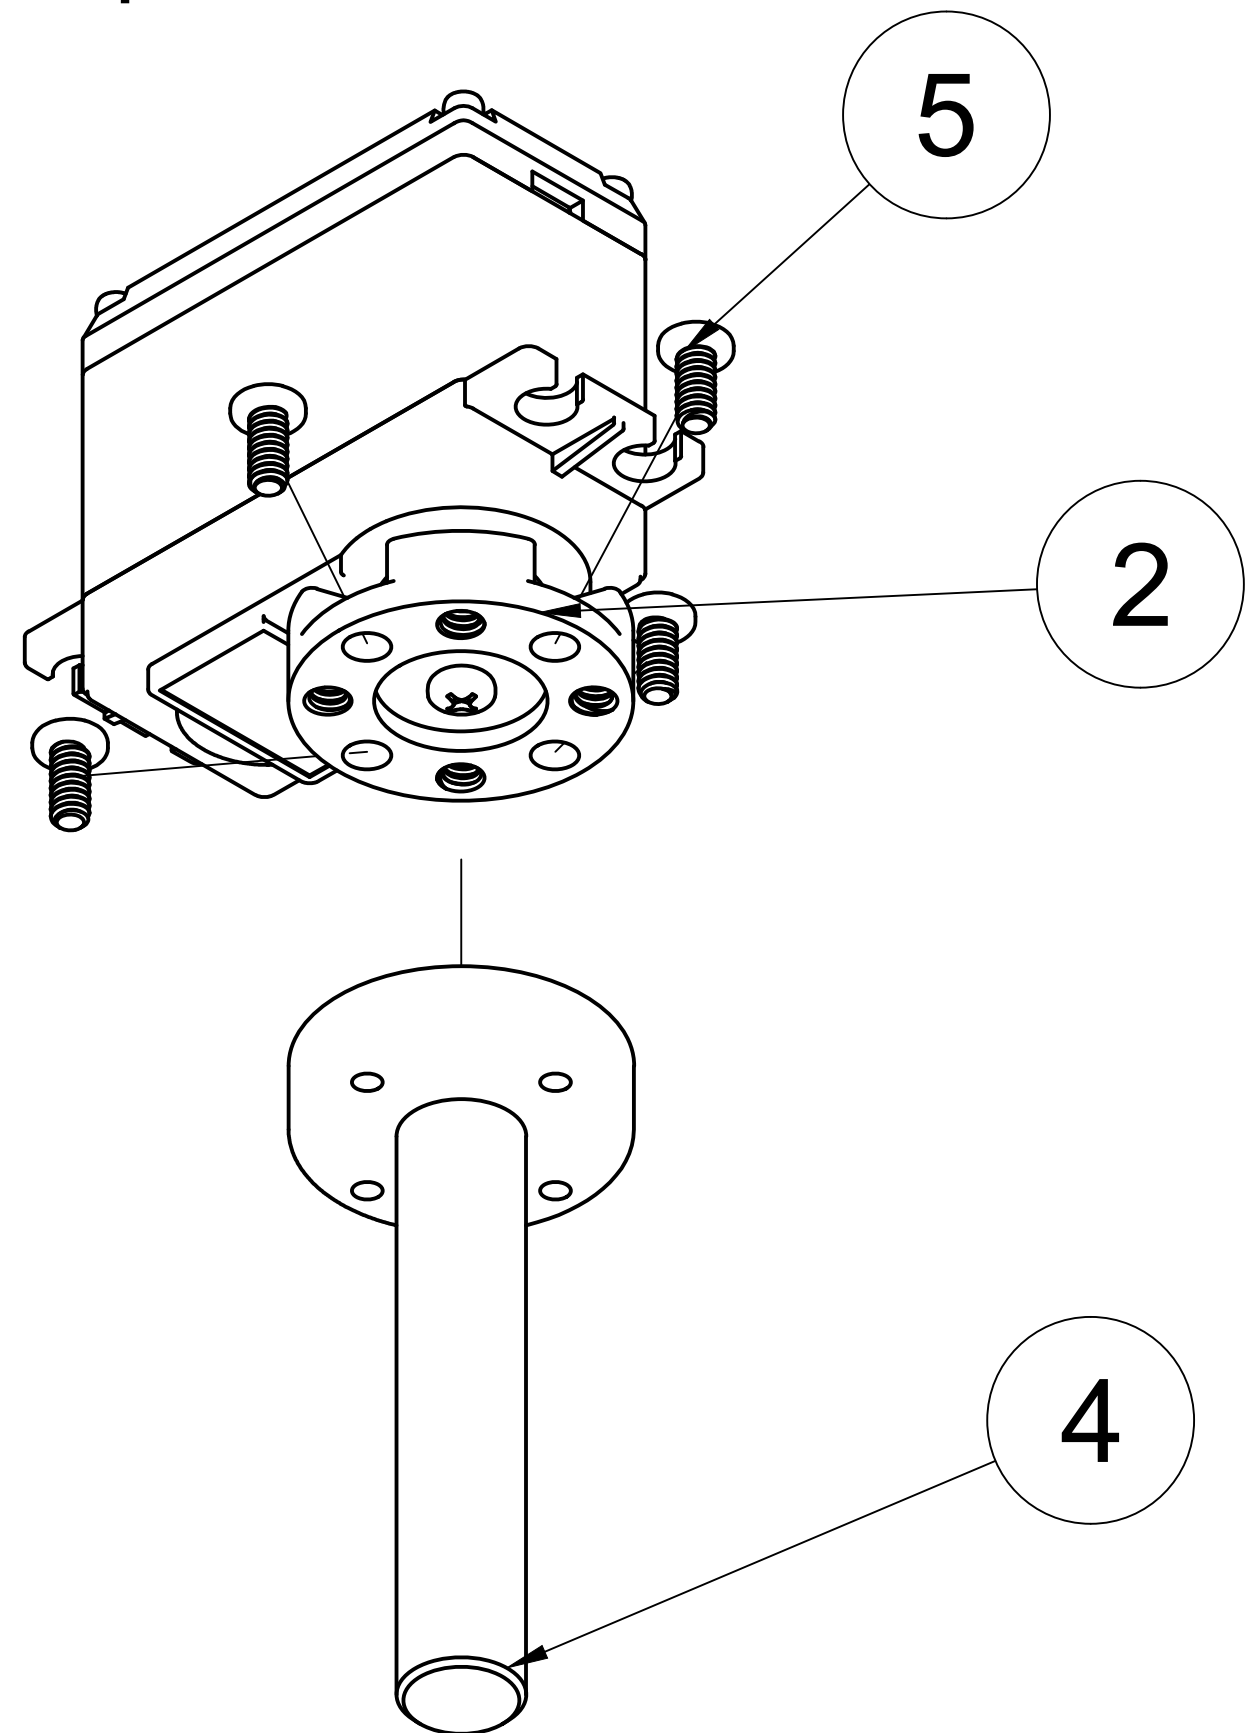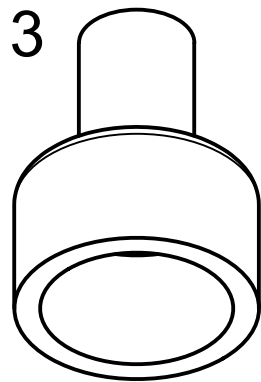


Head Turn Step 3

3. Slide #4 Through #7 all the way
Then slide #6 Through #1 and
Fasten to #7. Make sure from the
Bottom that #4 and #7 are aligned

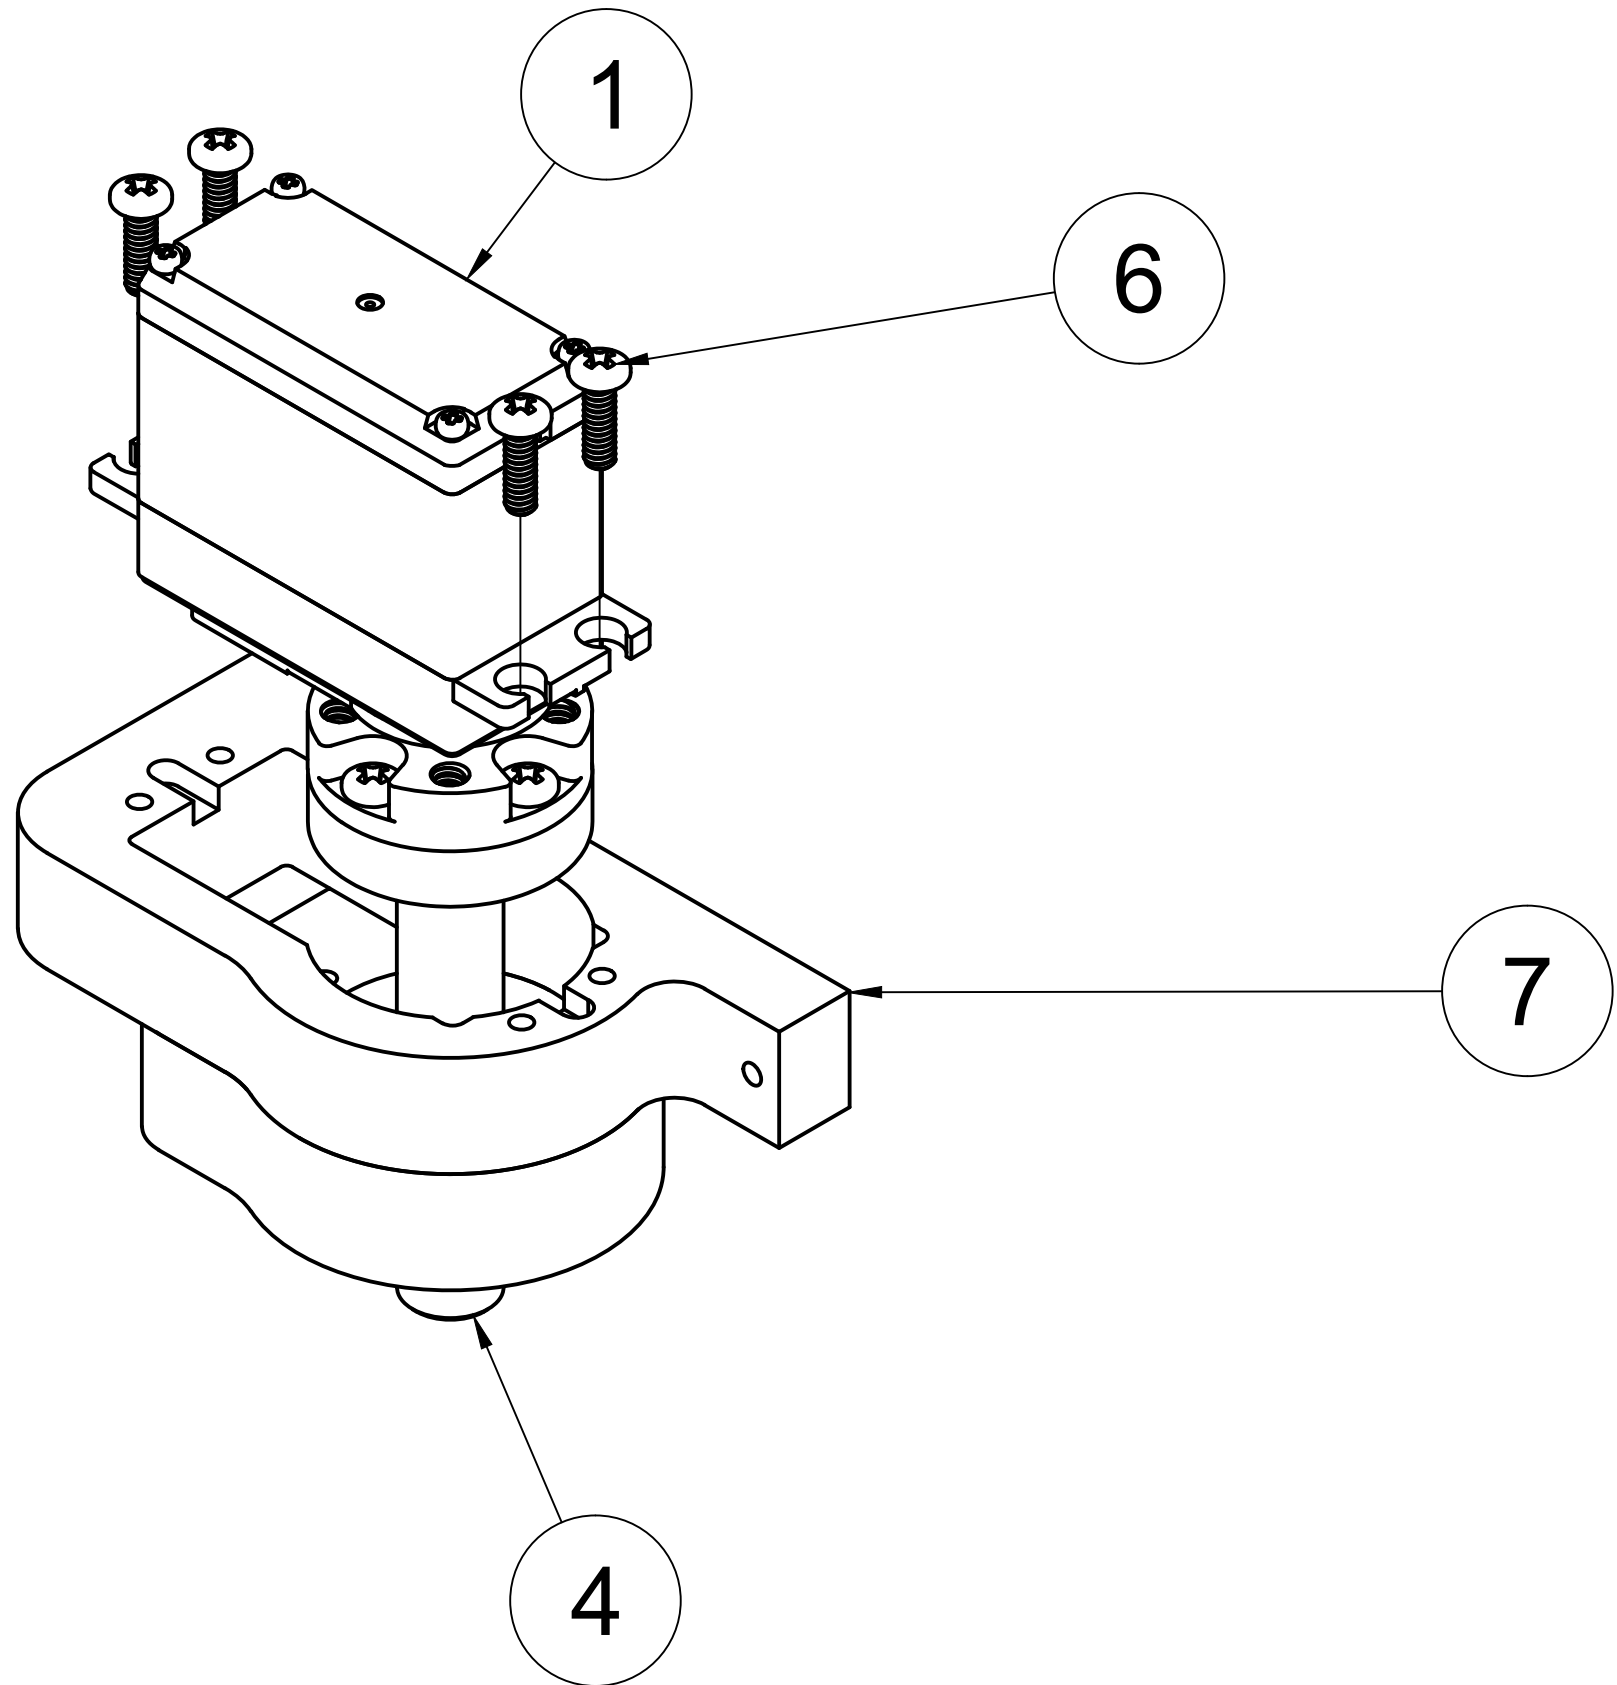

Head Turn Step 4


1. Slide #35 through the top hole in 4A and loop it back through to the top
2. Slide Assenbly #4 through the hole In #4A Tighten down with washer #8 and Screw #9
3. Remove the 2 front screws #6 from the servo.
4. Fasten your Servo Cables with #35 as shown in the Video.
5. Install #13 using #6 screws you removed in step 3
6. Fasten the eye Neo Pixel connections to #13 As shownen in the video.

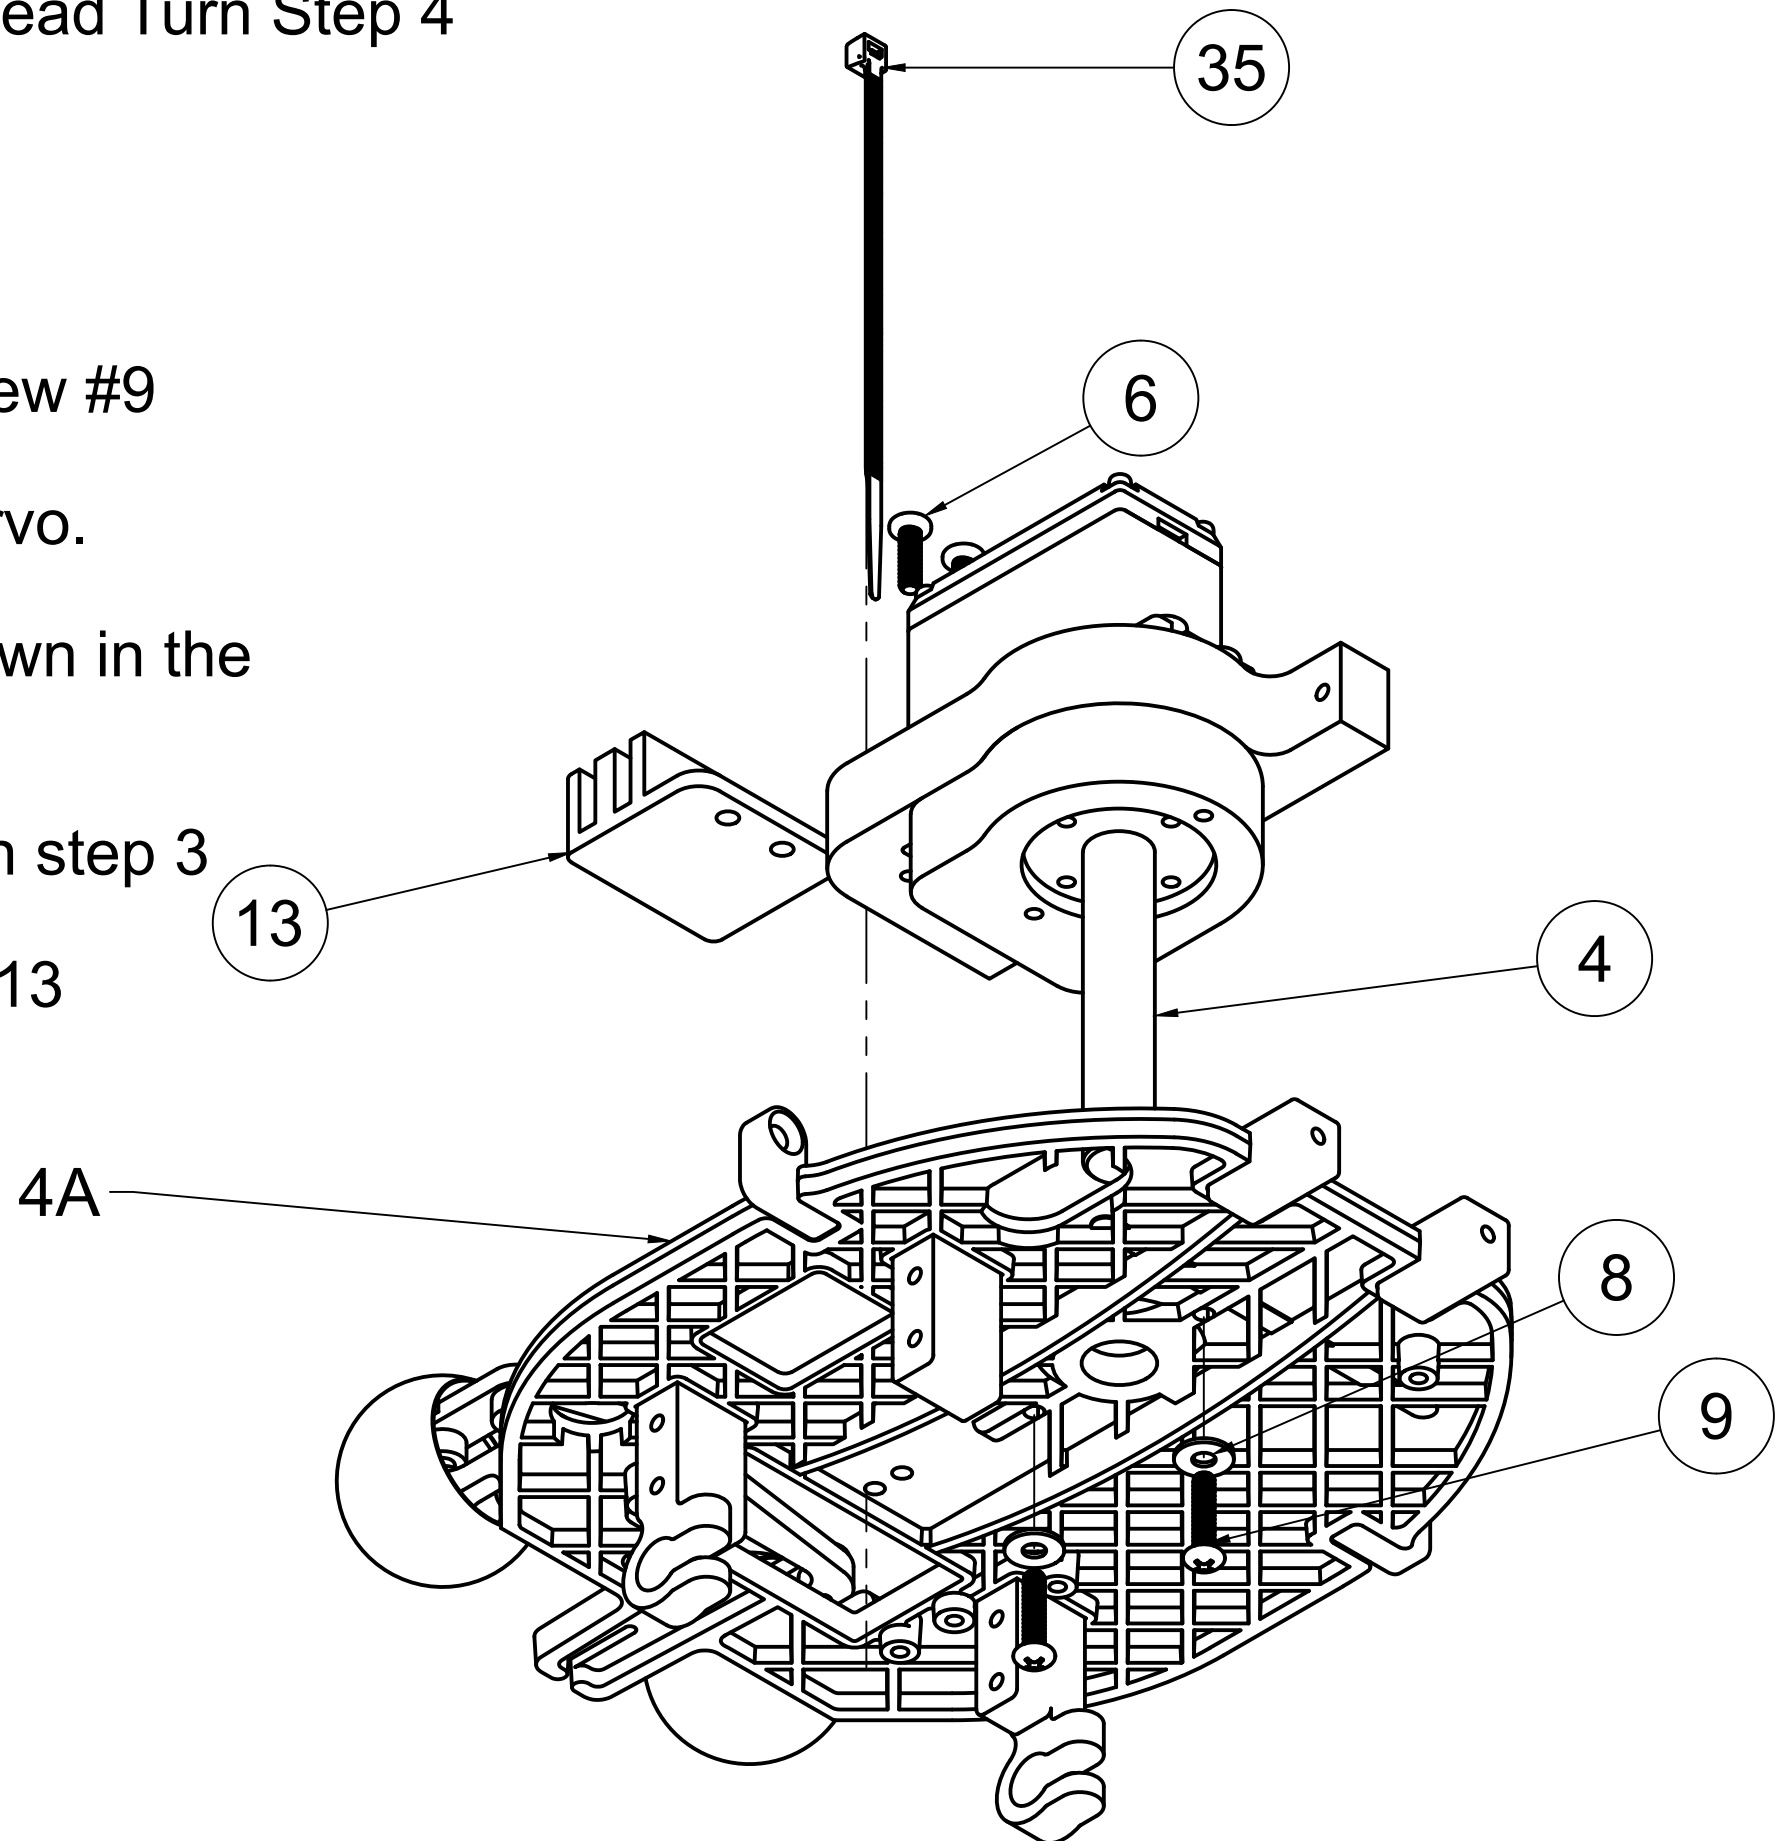

Head Turn Step 5


If you have a controller
Complete this step

1. Attach your controller #13 to #7
With 2 #10 Screws
2. Attach your servos to
Mouth, Eyes, Head On #13
3. Slide the coupling half way up
#4 and tighten the top set screw
#11. Make sure the servo is zeroed
and the set screws face to the back.

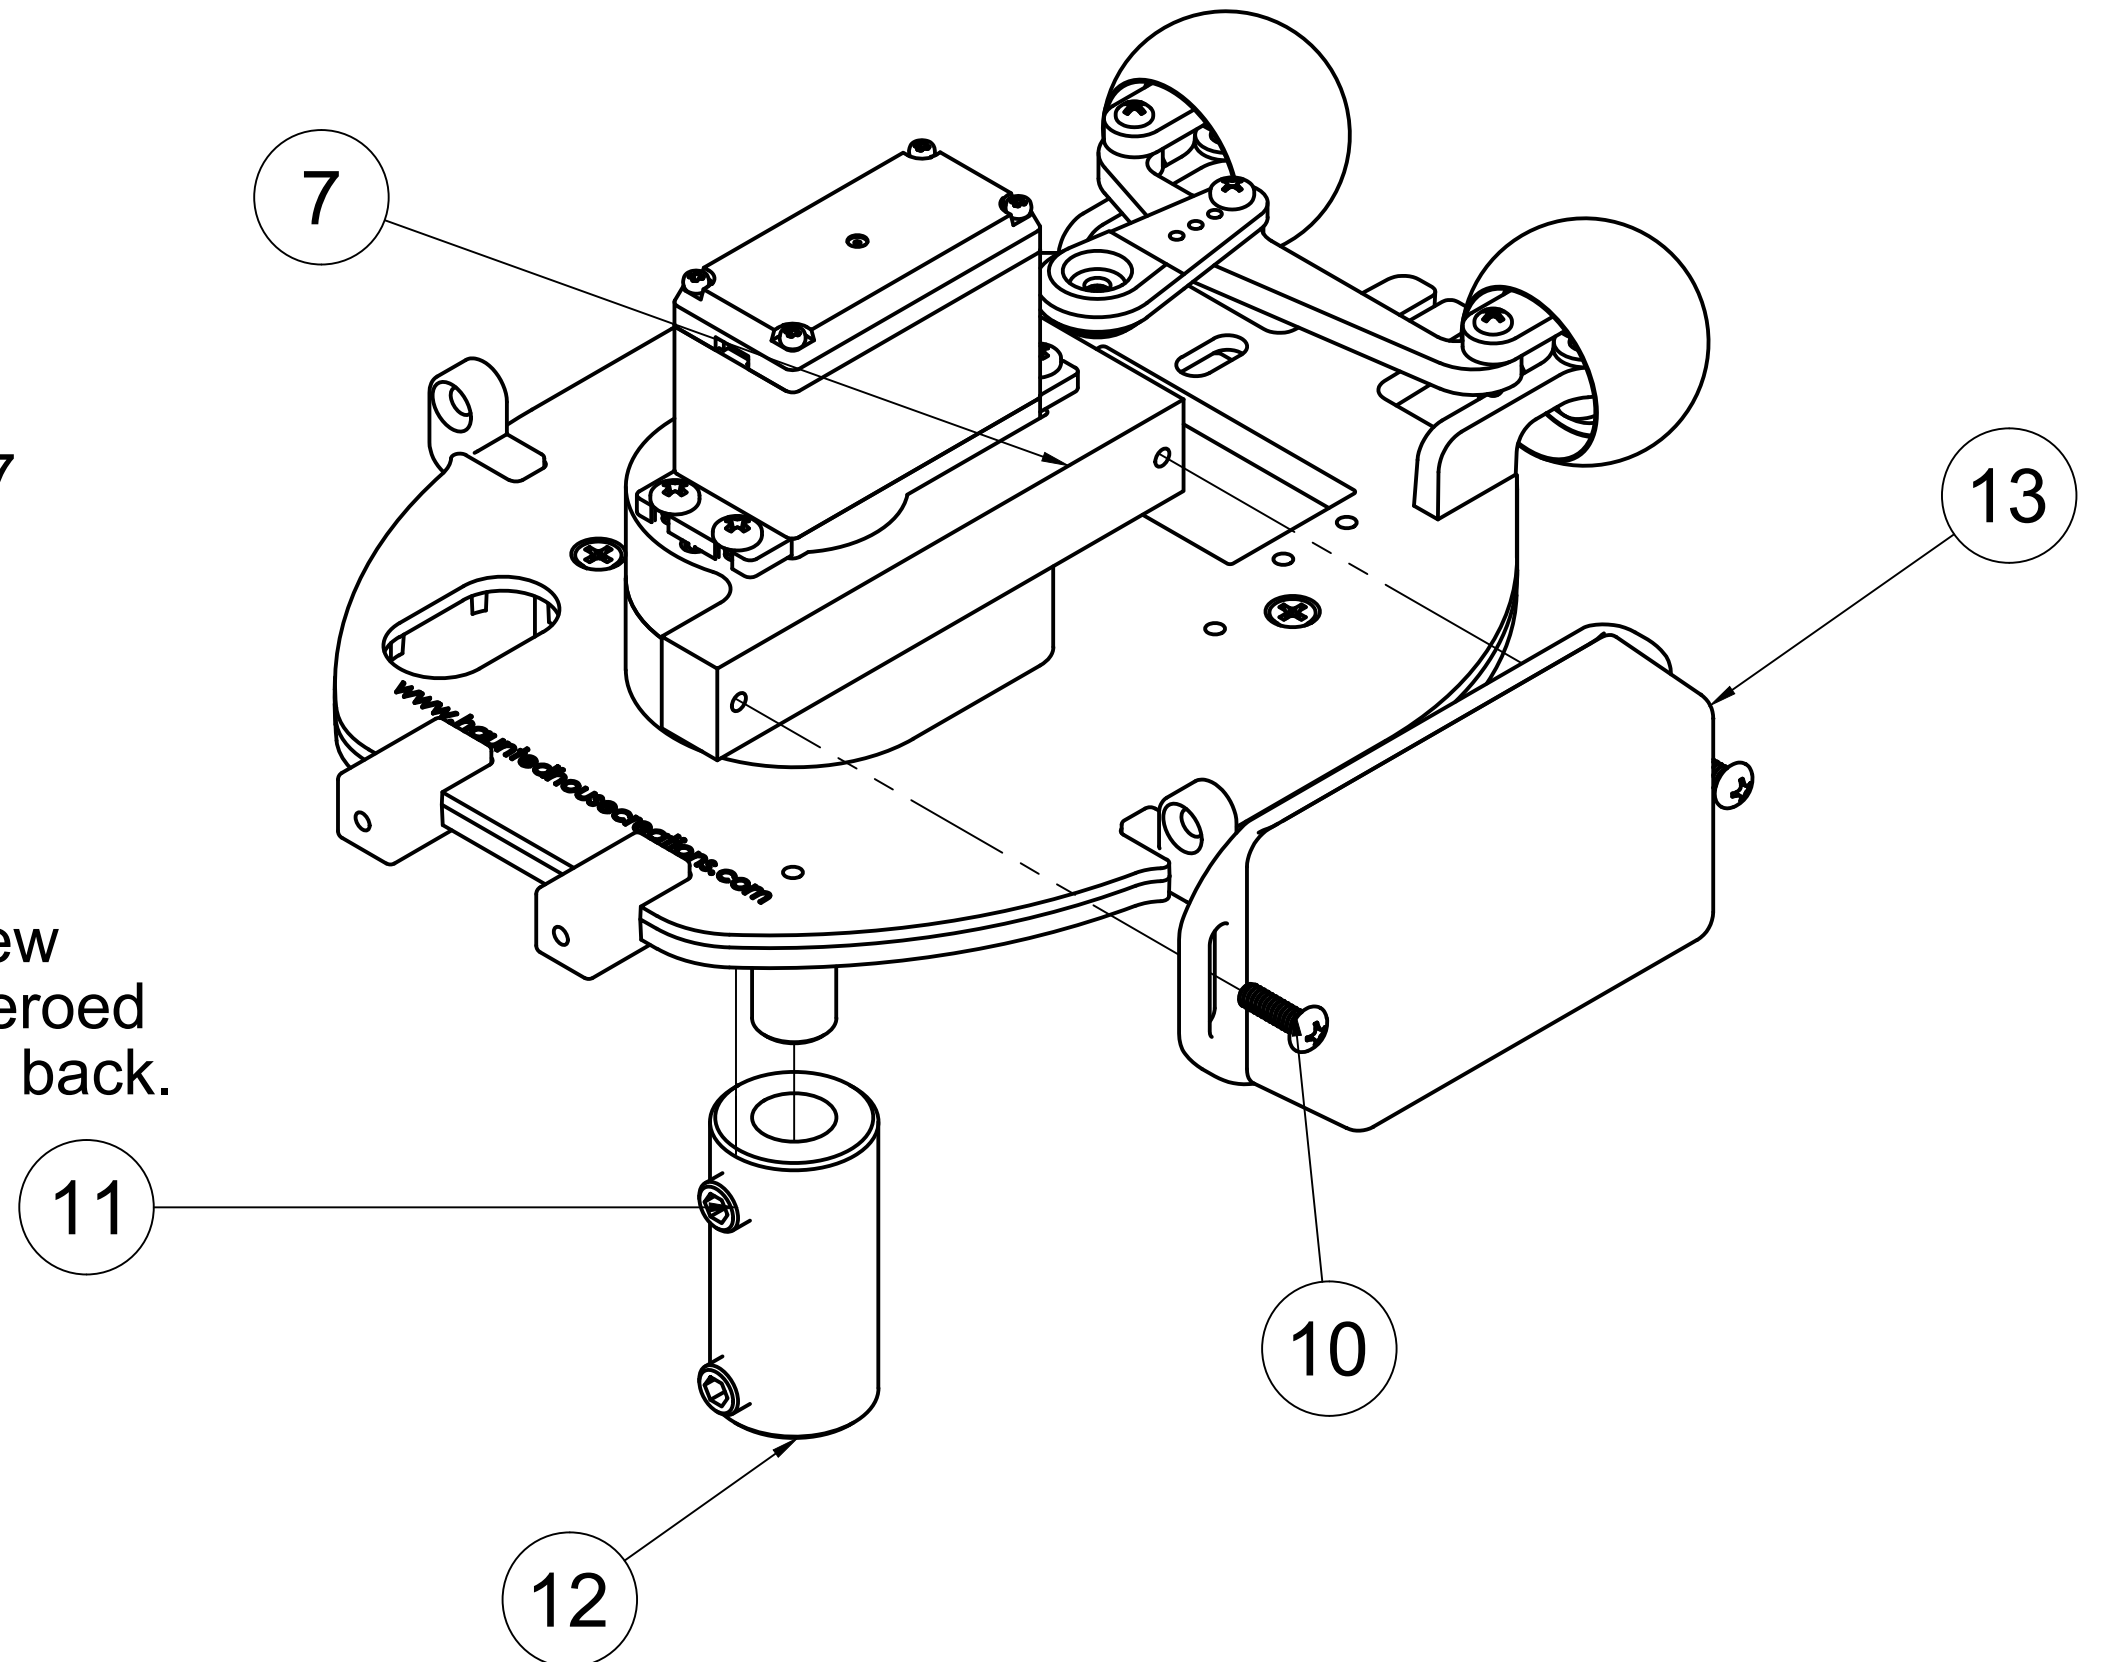

Step 10

1. Slide #32 on to #4 all the way until it seats
2. Slide 2 #31 screws through A and tighten in to the threaded part of #32.
3. Slide 33 on to 4 all the way until it seats with 32
Slide 34 through the holes in the back of 33 and tighten to B.

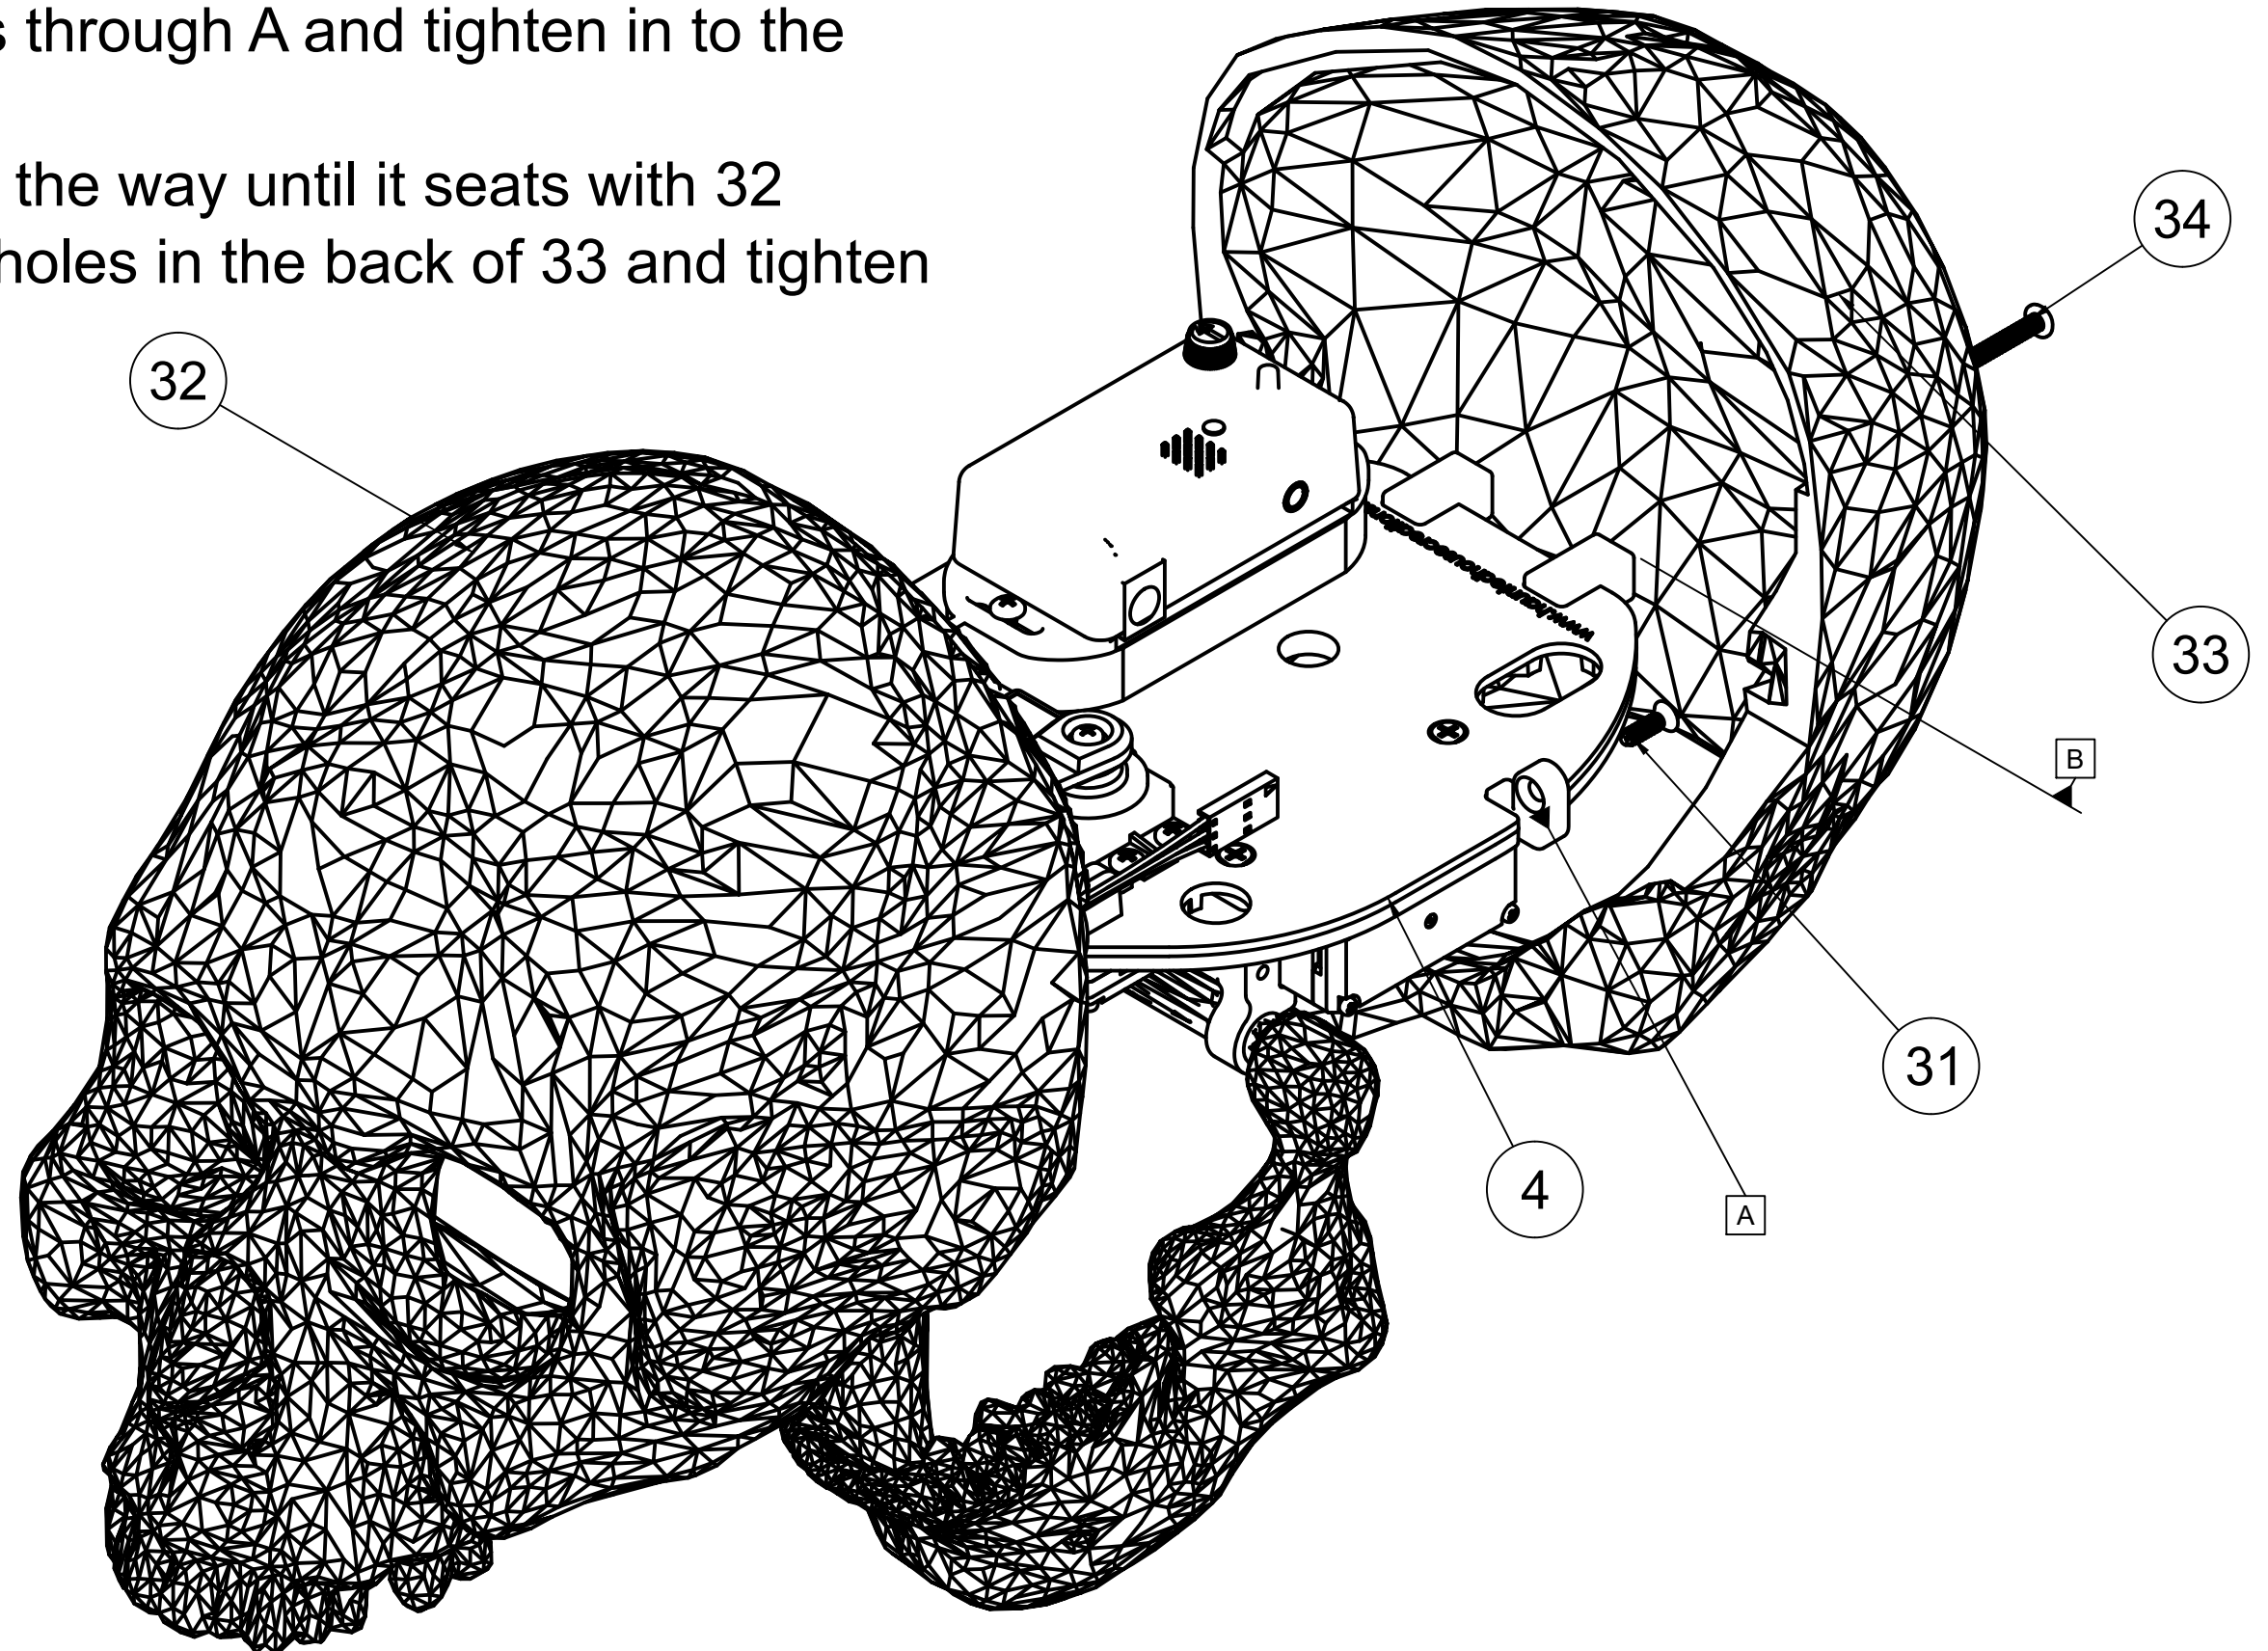

Notes	
*	This Kit Does Not Include Servos
*	This Kit Does Not Include ServoTalk or any Servo Controller.
*	This Kit Does Not Include Neo Pixles

Servo's	
Mouth, Eye and Head Turn Servo Hitec	HS-425BB OR HS-485HB 24 Spline
Servo Upgrade	HS-645MG 24 Spline

Resorces	
Servo's	www.hauntedhousecreations.com
	www.frightprops.com
	www.servocity.com
Servo Controller's	www.robotshop.com
	www.hauntedhousecreations.com
	www.frightideas.com
	www.frightprops.com
Neo Pixles	www.hauntedhousecreations.com

Tools Required
Flat head Screw Driver/1/8 Allen Wrench
Phillips Screw Driver/1/4 Wrench